


INDEX

INDEX FOR TOOL NUMBER

A.....	5
B.....	5
C.....	6
D.....	8
E.....	9
F.....	9
G.....	10
H.....	10
I.....	11
J.....	11
K.....	11
L.....	11
M.....	12
N.....	13
O.....	15
P.....	15
Q.....	15
R.....	16
S.....	16
T.....	18
U.....	19
V.....	19
W.....	20
X.....	21
Z.....	21
NUMBER / OTHERS...	21

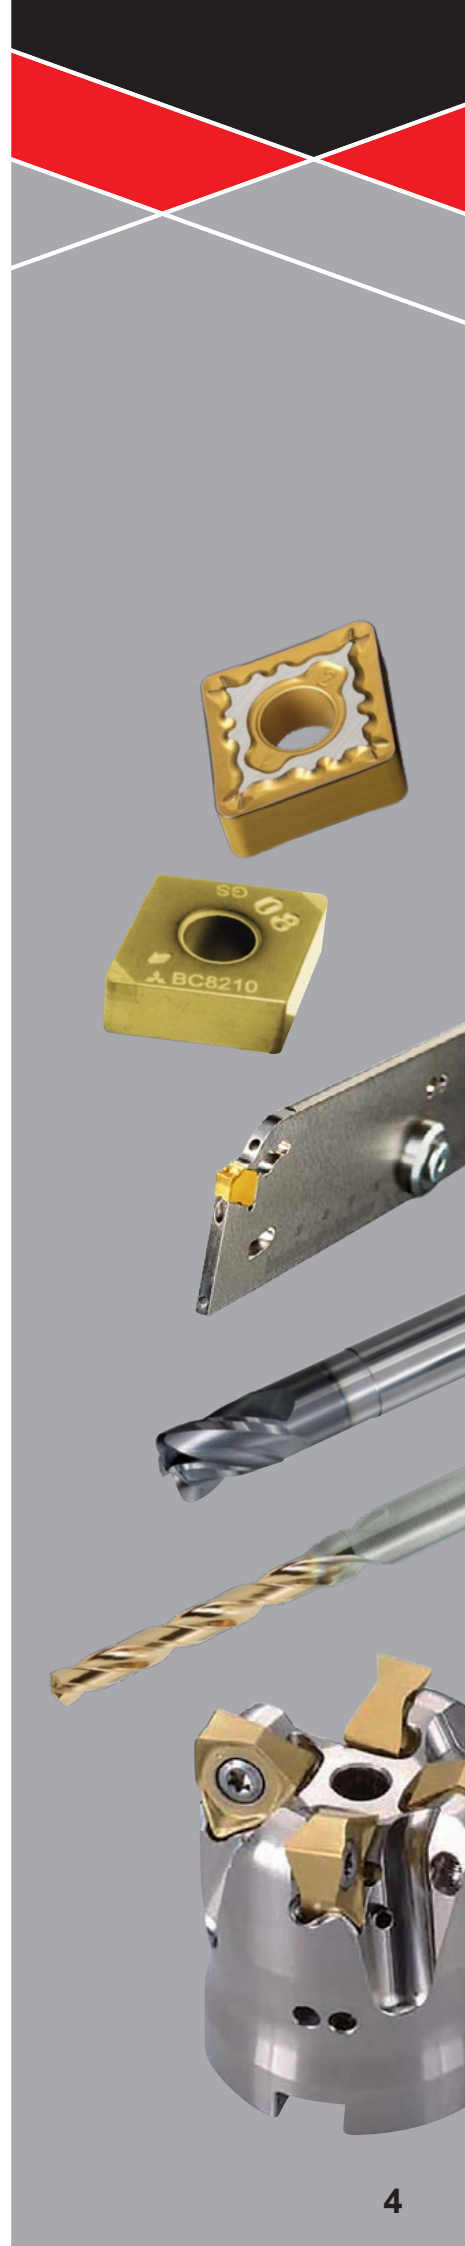

INDEX FOR TOOL NUMBER

ORDER NUMBER	PRODUCT NAME	PAGE
A		
A3SA	Carbide end mill	J113
A3SARB	Carbide end mill	J251
A50UMWLNRO8	M type boring bar	E047
ABS000-ES-M	Parts for ABS head	M026, M027
ABS000-ES-M0	Parts for ABS head	M026, M027
ABS00-F0	Screw (For ABS adapter)	M025
ABS000-FS-W	Parts for ABS adapter	M025
ABS000M	ABS head	M026
ABS000W	Parts for ABS adapter	M025
AD-BM10	Banjo adapter	F131
A000-DCLNR/L12	DOUBLE CLAMP DIMPLE BAR	E021
A000-DDUNR/L15	DOUBLE CLAMP DIMPLE BAR	E021
AD-G1/8	Adapter	F131
A000-DSKNR/L12	DOUBLE CLAMP DIMPLE BAR	E022
A000-DTFNR/L16	DOUBLE CLAMP DIMPLE BAR	E022
A000-DVUNR/L16	DOUBLE CLAMP DIMPLE BAR	E023
ADW04	Adjustable run-out system (For WSF406W type cutter)...	L084
A000-DWLNR/L00	DOUBLE CLAMP DIMPLE BAR	E023
AEMW000000ER	Insert (For BAE type cutter)	L344
AF5000 type	Spare parts (For AF5000 type face mill)	P029
AHX440S-000000R	AHX440S type face mill	L062, L063
AHX440SR-000000A	AHX440S type face mill	L062
AHX475S-000000AR	AHX475S type face mill	L067
AHX475SR-000000A	AHX475S type face mill	L067
AHX640SR-0000000	AHX640S type face mill	L071
AHX640S-000000R	AHX640S type face mill	L071, L072
AHX640WR/L-0000000	AHX640W type face mill	L079
AHX640W-000000R/L	AHX640W type face mill	L080
AJS0000T00	Clamp screw	P004
AJX00R-0000000	AJX type face mill	L228
AJX00-000000R	AJX type face mill	L228, L229
AJX00R-000AM-00000	AJX type end mill	L233
AJX00R-000SA-00S/SS/EL	AJX type end mill	L231, L232
AMS0	Clamp bridge	P016
A000MWLN type	Spare parts (For M type boring bar)	P026
AOGT1236-00PEFR-GM	Insert (For APX3000 type cutter)	L139, L144
AOMT1236-00PEER-0	Insert (For APX3000 type cutter)	L139, L144
AOMT1848-00PEER-0	Insert (For APX3000 type cutter)	L149, L154
AOX445-063A04R	AOX445 type face mill	L087
AOX445R-0000000	AOX445 type face mill	L087
AOX445R-000S32	AOX445 type end mill	L087
A000PCLNR/L00	P type boring bar	E044
A000PCLNR/L00	Spare parts (For P type boring bar)	P026
A000PDQNR/L15	P type boring bar	E045
A000PDUNR/L00	P type boring bar	E044
A000PDZNR/L15	P type boring bar	E046
APGT1135PDFR-G2	Insert (For BAP300 type cutter)	L123, L344
APGT1604PDFR-G2	Insert (For BAP400 type cutter)	L344
APMT1135PDER-00	Insert (For BAP300/SRM2 type cutter)	L123, L311, L344
APMT1604PDER-00	Insert (For BAP400/SRM2 type cutter)	L311, L317, L344
A000PSKNR/L00	P type boring bar	E043

ORDER NUMBER	PRODUCT NAME	PAGE
A000PSKNR/L00	Spare parts (For P type boring bar)	P026
A000PTFNR/L00	P type boring bar	E043
A000PWLNR/L06	P type boring bar	E045
APX3000-000A00RA	APX3000 type face mill	L137
APX3000R-000000A	APX3000 type face mill	L137
APX3000R-000M00A00	APX3000 type end mill	L138
APX3000R-000SA-000A	APX3000 type end mill	L136
APX3K-000A00A00RA	APX3000 type end mill	L143
APX3KR-0000S-000000CA	APX3000 type end mill	L142
APX4000-000A00RA	APX4000 type face mill	L147
APX4000R-000000A	APX4000 type face mill	L147
APX4000R-000M00A00	APX4000 type end mill	L148
APX4000R-000SA-000A	APX4000 type end mill	L146
APX4K-000A00A00RA	APX4000 type end mill	L153
APX4KR06316CA056A	APX4000 type end mill	L153
APX4KR-0000SA42S056A	APX4000 type end mill	L152
APX4KR-0000WA508-0000CA	APX4000 type end mill	L152
AQXR-000M00A00	AQX type end mill	L222
AQXR-000SA/N-00S/L	AQX type end mill	L220, L221
ARP6PR-000000A	ARP type face mill	L264
ARP0P-000000AR	ARP type face mill	L264
ARP0PR-0000AM-0000	ARP type end mill	L267
ARP0PR-0000SA-0000	ARP type end mill	L266
ARX00R-000M00A00	ARX type end mill	L271
ARX00R-000SA-00S/LW	ARX type end mill	L270, L271
ASPX4-000A00A00RA00	ASPX type end mill	L288
ASPX4R0805H00A127SA	ASPX type end mill	L289
ASS0	Spring (For SXZC/AJX/PMC/BRE/CV type cutter) ...	C031, L230, L232, L233, L326
ASX400	ASX400 type side cutter	L135
ASX400R-0000000	ASX400 type face mill	L116
ASX400-000000R	ASX400 type face mill	L116, L117
ASX400R-000AM16-00	ASX400 type end mill	L119
ASX400R-000S00	ASX400 type end mill	L118
ASX445R-0000000	ASX445 type face mill	L054
ASX445-000000R	ASX445 type face mill	L054, L055
ASX445R-000S00	ASX445 type end mill	L056
AXD4000A-050A04RD/E	AXD4000A type face mill	L202
AXD4000-000A00RA/B	AXD4000 type face mill	L195
AXD4000R-000000A/B	AXD4000 type face mill	L195
AXD4000R-000SA-000A/B	AXD4000 type end mill	L194
AXD7000-000A00RA/B	AXD7000 type face mill	L208, L209
AXD7000R-000000A/B	AXD7000 type face mill	L208
AXD7000R-000000A-H63A	AXD7000 type end mill (For HSK-T)	L209
AXD7000R-000SA-00SA/B	AXD7000 type end mill	L208
B		
B00000	Spare parts (For D type boring bar)	P026
B10000	Arbor (For D type boring head)	E050, F146, G043
BAE type	Spare parts (For BAE type end mill)	P035
BAP300 type	Spare parts (For BAP300 type face mill)	P029
BAP300 type	Spare parts (For BAP300 type end mill)	P035
BAP300R-000LS00	BAP300 type end mill	L122
BAP300R-000S00	BAP300 type end mill	L122
BAP3500 type	Spare parts (For BAP3500 type end mill)	P035

ORDER NUMBER	PRODUCT NAME	PAGE	ORDER NUMBER	PRODUCT NAME	PAGE
BAP400 type	Spare parts (For BAP400 type face mill)...	P029	BZC400 type	Spare parts (For BZC400 type end mill)...	P036
BAP400 type	Spare parts (For BAP400 type end mill)...	P035	BZC400 type	Spare parts (For BZC400 type face mill)...	P030
BB-G1/8	Banjo bolt.....	F131	C		
BC	Clamp set (For BC type cartridge).....	M009	C	Clamp set.....	E034
BC	Clamp set (For BC type cartridge).....	M009	C2MA	Carbide end mill.....	J092
BCP	Shim pin.....	P015	C2MHA	Carbide end mill.....	J094
BF407 type	Spare parts (For BF407 type face mill)....	P029	C3SA	Carbide end mill.....	J116
BF-CCGT TS2	Insert (Class G tolerance).....	B041	C3SARB	Carbide end mill.....	J253
BF-CNGM TAWS2	Insert (Class G tolerance).....	B024	C4LATB	Carbide end mill (For impellers).....	J330
BF-CNGM TS2	Insert (Class G tolerance).....	B024	CBJ/MPR S	CBJP/CBMP type end mill.....	L322
BF-CNGM TSWS2	Insert (Class G tolerance).....	B024	CB ORS	MICRO-MINI TWIN.....	E027
BF-DCGT TS2	Insert (Class G tolerance).....	B045	CB ORS	MICRO-MINI TWIN.....	E027
BF-DNGM TAWS2	Insert (Class G tolerance).....	B029	CB ORS B	MICRO-MINI TWIN.....	E027
BF-DNGM TS2	Insert (Class G tolerance).....	B029	CBT	Breaker piece.....	P016
BF-DNGM TSWS2	Insert (Class G tolerance).....	B029	CCET R/L-SN	Insert (Class E tolerance).....	A120
BM-CCGT TA2	Insert (Class G tolerance).....	B041	CCET R/L-SR	Insert (Class E tolerance).....	A119
BM-CNGM TA2	Insert (Class G tolerance).....	B024	CCET R/LW-SN	Insert (Class E tolerance).....	A120
BM-DCGT TA2	Insert (Class G tolerance).....	B045	CCGH MR/L-F	Insert (Class G tolerance).....	A115
BM-DNGM TA2	Insert (Class G tolerance).....	B029	CCGH R/L-F	Insert (Class G tolerance).....	A115
BMR	BMR bore boring cutter.....	L332	CCGT AZ	Insert (Class G tolerance).....	A115
BM-TNGM TA3	Insert (Class G tolerance).....	B033	CCGT FJ	Insert (Class G tolerance).....	A114
BN425 type	Spare parts (For BN425 type face mill)....	P029	CCGT M-FS	Insert (Class G tolerance).....	A114
BOE type	Spare parts (For BOE type end mill).....	P036	CCGT M-FS-P	Insert (Class G tolerance).....	A114
BOE type	Spare parts (For BOE type face mill).....	P029	CCGT M-LS	Insert (Class G tolerance).....	A116
BOES	Set bolt.....	P010	CCGT M-LS-P	Insert (Class G tolerance).....	A116
BR-CNGM TA2	Insert (Class G tolerance).....	B024	CCGT MR/L-F	Insert (Class G tolerance).....	A115
BR-DNGM TA2	Insert (Class G tolerance).....	B029	CCGT MR/L-SN	Insert (Class G tolerance).....	A119
BRE type	Spare parts (For BRE type end mill).....	P036	CCGT MR/L-SS	Insert (Class G tolerance).....	A117
BRP P A R	BRP type face mill.....	L276	CCGT M-SMG	Insert (Class G tolerance).....	A120
BRP P R S	BRP type face mill.....	L276	CCGT R/L-F	Insert (Class G tolerance).....	A115
BRP R S	BRP type end mill.....	L274, L275	CCGT R/L-SN	Insert (Class G tolerance).....	A119
BSP type	Spare parts (For BSP type end mill).....	P036	CCGT R/L-SS	Insert (Class G tolerance).....	A117
BSX300 type	Spare parts (For BSX300 type end mill)...	P036	CCGW	Insert (Class G tolerance).....	A121
BSX400 type	Spare parts (For BSX400 type face mill)...	P030	CK	Clamp bridge.....	P016
BSX400 type	Spare parts (For BSX400 type end mill)...	P036	CCMH MV	Insert (Class M tolerance).....	A118
BSX500 type	Spare parts (For BSX500 type face mill)...	P030	CCMH SV	Insert (Class M tolerance).....	A116
BSX500 type	Spare parts (For BSX500 type end mill)...	P036	CCMT	Insert (Class M tolerance).....	A118
BTAHR/L 50	Small tools holder (External back turning)...	D014	CCMT FM	Insert (Class M tolerance).....	A114
BTAT605000RX	Insert for external back turning.....	D014	CCMT FP	Insert (Class M tolerance).....	A114
BTAT MR-B	Insert for external back turning.....	D014	CCMT FV	Insert (Class M tolerance).....	A114
BTAT MR-SMB	Insert for external back turning.....	D014	CCMT LM	Insert (Class M tolerance).....	A116
BTAT R/L-B	Insert for external back turning.....	D014	CCMT LP	Insert (Class M tolerance).....	A115
BTAT SMB	Insert for external back turning.....	D014	CCMT LS	Insert (Class M tolerance).....	A116
BTBT MR-B	Insert for external back turning.....	D015	CCMT MK	Insert (Class M tolerance).....	A117
BTBT MR-SMB	Insert for external back turning.....	D015	CCMT MM	Insert (Class M tolerance).....	A117
BTBT R/L	Insert for external back turning.....	D015	CCMT MP	Insert (Class M tolerance).....	A117
BTBT R/L-B	Insert for external back turning.....	D015	CCMT MS	Insert (Class M tolerance).....	A118
BTBT R/L-SMB	Insert for external back turning.....	D015	CCMT MW	Insert (Class M tolerance).....	A118
BTVHR	Small tools holder (External back turning)...	D016	CCMT SW	Insert (Class M tolerance).....	A116
BTVHR F	Small tools holder (External back turning)...	D016	CCMW	Insert (Class M tolerance).....	A121, B042, B059
BTVT R-B	Insert for external back turning.....	D016	CCMX EN	Insert (For DCCC type cutter).....	L281
BXD4000R A/B	BXD4000 type face mill.....	L216	CCP	Shim pin.....	P015
BXD4000 RA/B	BXD4000 type face mill.....	L216, L217	CE4SRB	Ceramic radius end mill.....	J310
BXD4000R SA A/B	BXD4000 type end mill.....	L218	CE6SRB	Ceramic radius end mill.....	J310
BXD7000 type	Spare parts (For BXD7000 type end mill)...	P036			
BXD7000 type	Spare parts (For BXD7000 type face mill)...	P030			

INDEX FOR TOOL NUMBER

ORDER NUMBER	PRODUCT NAME	PAGE	ORDER NUMBER	PRODUCT NAME	PAGE
CESPR○○○○S○○	CESP type end mill.....	L318	CPMT○○○○ZPEN-M○	Insert (For PMR type cutter).....	L331, L344
CFSPR○○○○S○○	CFSP type end mill.....	L318	CPMX○○○○○○○	Insert (Class M tolerance).....	A123
CG○○○○RS-○○○	MICRO-MINI TWIN.....	F140	CPT○○○	Side lock plate (For WP type holder/M type boring bar)...	C017, E047
CGSPR○○○○S○○	CGSP type end mill.....	L318	CR○	Stop ring.....	G023, G032, H016
C○-GYHER/LM00-M25R/L	GY PSC holder.....	F094-F095	○○○○R-BLS	MICRO-MINI boring bar (Solid carbide).....	E030, F139
C○-GYHER/LM50-M25R/L	GY PSC holder.....	F098-F099	CRN2MB	CRN end mill.....	J208
C○-GYHER/LM90-M25R/L	GY PSC holder.....	F096-F097	CRN2MRB	CRN end mill.....	J248
CKW6	Clamp bridge.....	P016	CRN2MS	CRN end mill.....	J085
CMRA	Carbide end mill.....	J346	CRN2XL	CRN end mill.....	J087
CNGA○○○○○○○	Insert (Class G tolerance).....	B025	CRN2XLB	CRN end mill.....	J210
CNGG○○○○○○○-FJ	Insert (Class G tolerance).....	A074	CRN2XLRB	CRN end mill.....	J249
CNGG○○○○○○○-MJ	Insert (Class G tolerance).....	A075	CRN4JC	CRN end mill.....	J159
CNGN○○○○○○○	Insert (Class G tolerance).....	B038	CR○○RS-01	MICRO-MINI TWIN.....	E028
CNMA○○○○○○○	Insert (Class M tolerance) ...	A080, B025, B055	CR○○RS-01B	MICRO-MINI TWIN.....	E028
CNMG○○○○○○○	Insert (Class M tolerance).....	A078	CS○	Clamp screw.....	P004
CNMG○○○○○○○-FH	Insert (Class M tolerance).....	A074	CS-1/8-○○○○○	Coolant hose kit.....	F131
CNMG○○○○○○○-FP	Insert (Class M tolerance).....	A074	CS300590T	Plug.....	F129
CNMG○○○○○○○-FS	Insert (Class M tolerance).....	A074	CS5015060T	Clamp screw.....	P004
CNMG○○○○○○○-FY	Insert (Class M tolerance).....	A074	CSBP type	Spare parts (For MC type holder).....	P019
CNMG○○○○○○○-GH	Insert (Class M tolerance).....	A079	○○○○SCLC type	Spare parts (For S type boring bar).....	P026
CNMG○○○○○○○-GJ	Insert (Class M tolerance).....	A079	○○○○SCLCRO○	S type boring bar/MICRO-MINI (Carbide shank)...	E024, E038
CNMG○○○○○○○-GK	Insert (Class M tolerance).....	A077	○○○○SCZC type	Spare parts (For S type boring bar).....	P026
CNMG○○○○○○○-GM	Insert (Class M tolerance).....	A077	○○○○SDQCR○	S type boring bar (Carbide shank).....	E039
CNMG○○○○○○○-LK	Insert (Class M tolerance).....	A075	○○○○SDUC type	Spare parts (For S type boring bar).....	P026
CNMG○○○○○○○-LM	Insert (Class M tolerance).....	A075	○○○○SDUCR○	S type boring bar (Carbide shank).....	E037
CNMG○○○○○○○-LP	Insert (Class M tolerance).....	A074	○○○○SDZC type	Spare parts (For S type boring bar).....	P026
CNMG○○○○○○○-LS	Insert (Class M tolerance).....	A075	CSKP type	Spare parts (For MC type holder).....	P019
CNMG○○○○○○○-MA	Insert (Class M tolerance).....	A077	CSKPR○○CA○	BC type cartridge.....	M008
CNMG○○○○○○○-MH	Insert (Class M tolerance).....	A077	CSRA	Carbide end mill.....	J344
CNMG○○○○○○○-MJ	Insert (Class M tolerance).....	A075	○○○○SSKC type	Spare parts (For S type boring bar).....	P026
CNMG○○○○○○○-MK	Insert (Class M tolerance).....	A076	CSSN type	Spare parts (For MC type holder).....	P019
CNMG○○○○○○○-MM	Insert (Class M tolerance).....	A076	CSSP type	Spare parts (For MC type holder).....	P019
CNMG○○○○○○○-MP	Insert (Class M tolerance).....	A076	CSSPR○○CA○	BC type cartridge.....	M008
CNMG○○○○○○○-MS	Insert (Class M tolerance).....	A076, A077	CS○○OT	Clamp screw.....	P004
CNMG○○○○○○○-MW	Insert (Class M tolerance).....	A078	CS○○○○OT	Clamp screw.....	P004
CNMG○○○○○○○-RK	Insert (Class M tolerance).....	A079	○○○○STFCR○	S type boring bar (Carbide shank).....	E036
CNMG○○○○○○○-RM	Insert (Class M tolerance).....	A078	CSTN type	Spare parts (For MC type holder).....	P019
CNMG○○○○○○○-RP	Insert (Class M tolerance).....	A078	○○○○STUCR06	MICRO-DEX boring bar (Carbide shank) ...	E025
CNMG○○○○○○○-RS	Insert (Class M tolerance).....	A079	CSVHR/L○○○○	Small tools holder (For cam tool posts) ...	D027
CNMG○○○○○○○-SA	Insert (Class M tolerance).....	A075	○○○○SVQCR○	S type boring bar (Carbide shank).....	E040
CNMG○○○○○○○-SH	Insert (Class M tolerance).....	A075	CSVTB○○○R-B	Insert for external back turning.....	D028
CNMG○○○○○○○-SW	Insert (Class M tolerance).....	A075	CSVTB○○○R/L	Insert for external back turning.....	D028
CNMG○○○○○○○-SY	Insert (Class M tolerance).....	A075	CSVTBXL	Insert for external back turning.....	D028
CNMM○○○○○○○-HL	Insert (Class M tolerance).....	A079	CSVTC○○○R-B	Insert for external cutting off.....	D028
CNMM○○○○○○○-HM	Insert (Class M tolerance).....	A080	CSVTC○○○R/L	Insert for external cutting off.....	D028
CNMM○○○○○○○-HR	Insert (Class M tolerance).....	A080	CSVTF○○○R/L	Insert for external front turning.....	D027
CNMM○○○○○○○-HV	Insert (Class M tolerance).....	A080	CSVTF○○○R/L-B	Insert for external front turning.....	D027
CNMM○○○○○○○-HX	Insert (Class M tolerance).....	A079	CSVTFXL	Insert for external front turning, Copying... D027	D027
CNMM○○○○○○○-HZ	Insert (Class M tolerance).....	A080	CSVTG○○○○R/L	Insert for grooving.....	D029
CNMN○○○○○○○	Insert (Class M tolerance).....	A111	CSVTT○○○○RR/L	Insert for threading.....	D029
CPGT○○○○○○○	Insert (Class G tolerance).....	A122, B059	○○○○SVUC type	Spare parts (For S type boring bar).....	P026
CPGT○○○○○○○R/L-F	Insert (Class G tolerance).....	A122	○○○○SWUBR○	MICRO-DEX boring bar (Carbide shank) ...	E024
CPMH○○○○○○○-FV	Insert (Class M tolerance).....	A122	CTAHR1010-120S	Small tools holder (For external cutting off)...	D020
CPMH○○○○○○○-MV	Insert (Class M tolerance).....	A123			
CPMH○○○○○○○R/L-F	Insert (Class M tolerance).....	A122			
CPMH○○○○○○○-SV	Insert (Class M tolerance).....	A122			

ORDER NUMBER	PRODUCT NAME	PAGE
CTAHR/L	Small tools holder (For external cutting off)...	D020
CTAN type	Spare parts (For MC type holder).....	P019
CTAP type	Spare parts (For MC type holder).....	P019
CTAT	Insert for cutting off.....	D021
CTAT	Insert for cutting off.....	D021
CTAT	Insert for cutting off.....	D021
CTBHR/L	Small tools holder (For external cutting off).....	D015, D022
CTBT	Insert for cutting off.....	D022
CTCH type	Spare parts (For CTCH type holder).....	P018
CTCP type	Spare parts (For MC type holder).....	P019
CTDH type	Spare parts (For CTDH type holder).....	P018
CTEH type	Spare parts (For CTEH type holder).....	P018
CTE	Shim (For MMTE holder).....	P012
CTFP type	Spare parts (For MC type holder).....	P019
CTGN type	Spare parts (For MC type holder).....	P019
CTGP type	Spare parts (For MC type holder).....	P019
CTI	Shim (For MMTI holder).....	P012
CTORS-M	MICRO-MINI TWIN.....	G037
CV type	Spare parts (For CV type end mill).....	P037
CV20 type	Spare parts (For CV20 type end mill).....	P037
CWAF10R	Wedge.....	L097
CWAHX640WN	Wedge.....	L081
CWAOX445N	Wedge.....	L088
CWS	Wedge.....	L337, P031
CWS42SER/L	Wedge.....	L339
CWS42SPR/L	Wedge.....	L335
CWSF406N	Wedge.....	L084

D

DC2SB	Diamond coating end mill.....	J213
DC2XLB	Diamond coating end mill.....	J215
DCBSS	Diamond coated drill, For hard brittle materials...	N142
DCCR	DCCC type end mill.....	L280
DCET	Insert (Class E tolerance).....	A129
DCET	Insert (Class E tolerance).....	A127
DCET	Insert (Class E tolerance).....	A129
DCGT11T	Insert (Class G tolerance).....	A125
DCGT	Insert (Class G tolerance).....	A124
DCGT	Insert (Class G tolerance).....	A124
DCGT	Insert (Class G tolerance).....	A124
DCGT	Insert (Class G tolerance).....	A125
DCGT	Insert (Class G tolerance).....	A125
DCGT	Insert (Class G tolerance).....	A128
DCGT	Insert (Class G tolerance).....	A126
DCGT	Insert (Class G tolerance).....	A129
DCGT	Insert (Class G tolerance).....	A125
DCGT	Insert (Class G tolerance).....	A128
DCGT	Insert (Class G tolerance).....	A126
DCGW	Insert (Class G tolerance).....	A129
DCK	Clamp bridge.....	P016
DCLNR/L	DOUBLE CLAMP type holder.....	C008
DCMT	Insert (Class M tolerance).....	A127
DCMT	Insert (Class M tolerance).....	A124
DCMT	Insert (Class M tolerance).....	A124

ORDER NUMBER	PRODUCT NAME	PAGE
DCMT	Insert (Class M tolerance).....	A124
DCMT	Insert (Class M tolerance).....	A125
DCMT	Insert (Class M tolerance).....	A125
DCMT	Insert (Class M tolerance).....	A125
DCMT	Insert (Class M tolerance).....	A127
DCMT	Insert (Class M tolerance).....	A127
DCMT	Insert (Class M tolerance).....	A126
DCMT	Insert (Class M tolerance).....	A127
DCMT	Insert (Class M tolerance).....	A127
DCMT	Insert (Class M tolerance).....	A125
DCMW	Insert (Class M tolerance) ...	A129, B045, B060
DCS	Spring.....	C008, C010, C016, C019, E021, H006
DCSD type	Spare parts (For DCSD type end mill).....	P037
DCSN type	Spare parts (For DCSN type end mill).....	P037
DCSSM	Diamond coated drill, Medium, For non-ferrous material ...	N140
DCSSS	Diamond coated drill, Short, For non-ferrous material ...	N140
DCSVN32	Shim.....	P012
DC	Clamp screw.....	P004
DCTU type	Spare parts (For D type boring head).....	P024
DDJNR/L	DOUBLE CLAMP type holder.....	C010
DEGX	Insert (For AL type holder).....	A130
DEGX	Insert (For AL type holder).....	A130, B066
DF2XLB	Diamond coated end mill.....	J217
DF2XLB	Diamond coated end mill.....	J220
DF4JC	Diamond coated end mill.....	J160
DFC4JC	DFC type end mill.....	J161
DFCJRT	DFC type end mill.....	J170
DG type	Spare parts (For DG type holder).....	P023
DLC3SA	DLC coated end mill.....	J114
DLC3SARB	DLC coated end mill.....	J255
DLC4LATB	DLC coated end mill.....	J328
DLE	Leading drills.....	N020
DNGA	Insert (Class G tolerance)....	A087, B030, B055
DNGG	Insert (Class G tolerance).....	A081
DNGG	Insert (Class G tolerance).....	A086
DNGM	Insert (Class G tolerance).....	A083
DNGN	Insert (Class G tolerance).....	B038
DNMA	Insert (Class M tolerance).....	A087
DNMG	Insert (Class M tolerance).....	A085
DNMG	Insert (Class M tolerance).....	A081
DNMG	Insert (Class M tolerance).....	A081
DNMG	Insert (Class M tolerance).....	A081
DNMG	Insert (Class M tolerance).....	A081
DNMG	Insert (Class M tolerance).....	A087
DNMG	Insert (Class M tolerance).....	A087
DNMG	Insert (Class M tolerance).....	A085
DNMG	Insert (Class M tolerance).....	A085
DNMG	Insert (Class M tolerance).....	A082
DNMG	Insert (Class M tolerance).....	A082
DNMG	Insert (Class M tolerance).....	A082
DNMG	Insert (Class M tolerance).....	A085
DNMG	Insert (Class M tolerance).....	A085

INDEX FOR TOOL NUMBER

ORDER NUMBER	PRODUCT NAME	PAGE
DNMG○○○○○○○-MJ	Insert (Class M tolerance)	A083
DNMG○○○○○○○-MK	Insert (Class M tolerance)	A084
DNMG○○○○○○○-MM	Insert (Class M tolerance)	A084
DNMG○○○○○○○-MP	Insert (Class M tolerance)	A084
DNMG○○○○○○○-MS	Insert (Class M tolerance)	A084
DNMG○○○○○○○-RK	Insert (Class M tolerance)	A086
DNMG○○○○○○○-RM	Insert (Class M tolerance)	A086
DNMG○○○○○○○-RP	Insert (Class M tolerance)	A086
DNMG○○○○○○○-RS	Insert (Class M tolerance)	A086
DNMG○○○○○○○-SA	Insert (Class M tolerance)	A083
DNMG○○○○○○○-SH	Insert (Class M tolerance)	A083
DNMG○○○○○○○-SY	Insert (Class M tolerance)	A083
DNMM○○○○○○○-HL	Insert (Class M tolerance)	A087
DNMM○○○○○○○-HZ	Insert (Class M tolerance)	A087
DNMX○○○○○○○-MW	Insert (Class M tolerance)	A085
DNMX○○○○○○○-SW	Insert (Class M tolerance)	A083
DPCL type	Spare parts (For D type boring head)	P024
DPCL○○○R	D type boring head	E049
DPDH type	Spare parts (For D type boring head)	P024
DPDH○○○R	D type boring head	E049
DPDU type	Spare parts (For D type boring head)	P024
DPDU○○○R	D type boring head	E048
DPDZ type	Spare parts (For D type boring head)	P024
DPSK type	Spare parts (For D type boring head)	P024
DPT type	Spare parts (For D type boring head)	P024
DPT2○○○R	D type boring head	G042
DPT4○○○R	D type boring head	F146
DPTF type	Spare parts (For D type boring head)	P024
DPTF○○○R	D type boring head	E048
DPVP type	Spare parts (For D type boring head)	P024
DPVP○○○R	D type boring head	E050
DSAE○○○○○X03S○○○	DSAE type drill (External coolant)	N080
DSAS○○○○○X○○S○○○	DSAS type drill (Internal coolant)	N075
DTGNR/L○○○○○○○	DOUBLE CLAMP type holder	C016
DVAS○○○○○X○○S○○○	DVAS type drill (Internal coolant, Mini-size)	N038
DVAS○○○○○X○○S○○○	DVAS type drill (Internal coolant, Mini-size)	N039
DVJNR/L○○○○○○○	DOUBLE CLAMP type holder	C019
DVPNR/L○○○○○○○	DOUBLE CLAMP type holder	C021
DVVNN○○○○○○○	DOUBLE CLAMP type holder	C020
DWAE○○○○○X○○S○○○	DWAE type drill (External coolant)	N031
DWAE○○○○○X○○S○○○	DWAE type drill (External coolant, Mini-size)	N030
DWLNLR/L○○○○○○○	DOUBLE CLAMP type holder	C022

E

E○○	Stop ring	C019, E050, F146, G042
E404 type	Spare parts (For E404 type face mill)	P030
ECMP type	Spare parts (For ECMP type end mill)	P037
EGHR type	Spare parts (For EG type holder)	P018
EPSS	Straight shank drill, Plate pal	N228
E○○○SCLP type	Spare parts (For COBRA boring bar)	P024
E○○○STFP type	Spare parts (For COBRA boring bar)	P024
ETHR type	Spare parts (For ET type holder)	P018
ET○NR/L	Spare parts (For SL type holder)	P021

ORDER NUMBER	PRODUCT NAME	PAGE
F		
FA○	Boring unit (Angular type)	M012
FA○-FAPN○○○	Boring unit (Angular type)	M012
FA○-FASC○○○	Boring unit (Angular type)	M012
FA○-FASP○○○	Boring unit (Angular type)	M012
FAPN○○○	Cartridge (For boring unit)	M012
FASC○○○	Cartridge (For boring unit)	M012
FASP○○○	Cartridge (For boring unit)	M012
FBE2 type	Spare parts (For FBE2 type end mill)	P040
FBP415 type	Spare parts (For FBP415 type face mill)	P030
FC400890T	Clamp screw	P004
FCDG4 type	Spare parts (For F type boring bar)	P025
FCL5 type	Spare parts (For F type boring bar)	P025
FCSK type	Spare parts (For F type boring bar)	P025
FCTU type	Spare parts (For F type boring bar)	P025
FCTU○○○R/L	FCTU type boring bar	E034
FE404R/L○○○○○	FE404 type face mill	L338
FF3000 type	Spare parts (For FF3000 type end mill)	P037
FF3000R○○○○○	FF3000 type face mill	L098
FFAWR	Adjusting wedge (For FF3000 type face mill)	L098
FFCSR	Cartridge (For FF3000 type face mill)	L098
FFL	Lever (For FF3000 type face mill)	L098
FFLB	Lever screw (For FF3000 type face mill)	L098
FFP	Lock pin (For FF3000 type face mill)	L098
FFRP	Radial spring (For FF3000 type face mill)	L098
FFSS	Shim (For FF3000 type face mill)	L098
FFW	Washer (For FF3000 type face mill)	L098
FMAX-○○○A○○○R	FMAX type face mill	L090
FMAX-○○○B○○○R	FMAX type face mill	L092
FMAXR○○○○○	FMAX type face mill	L091
FMAXR○○○○○CLW	FMAX type face mill	L089
FN548 type	Spare parts (For FN548 type face mill)	P031
FP490R/L○○○○○	FP490 type face mill	L334
FP590R/L○○○○○	FP590 type face mill	L336
FSCLC○○○○○R-○○E-○○○	DIMPLE BAR (Carbide shank)	E009
FSCLC○○○○○R/L-○○A	DIMPLE BAR (Steel shank)	E008
FSCLC○○○○○R/L-○○E	DIMPLE BAR (Carbide shank)	E009
FSCLC○○○○○R/L-○○S	DIMPLE BAR	E008
FSCLP○○○○○R-○○E-○○○	DIMPLE BAR (Carbide shank)	E009
FSCLP○○○○○R/L-○○A	DIMPLE BAR (Steel shank)	E008
FSCLP○○○○○R/L-○○E	DIMPLE BAR (Carbide shank)	E009
FSCLP○○○○○R/L-○○S	DIMPLE BAR	E008
FSDQC○○○○○R/L-○○A	DIMPLE BAR (Steel shank)	E014
FSDQC○○○○○R/L-○○E	DIMPLE BAR (Carbide shank)	E015
FSDQC○○○○○R/L-○○S	DIMPLE BAR	E014
FSDUC○○○○○R/L-○○A	DIMPLE BAR (Steel shank)	E012
FSDUC○○○○○R/L-○○E	DIMPLE BAR (Carbide shank)	E013
FSDUC○○○○○R/L-○○S	DIMPLE BAR	E012
FSL5○○○R	FSL5 type boring bar	F144, G040
FSTE type	Spare parts (For FSTE type end mill)	P038
FSTUP○○○○○R-○○E-○○○	DIMPLE BAR (Carbide shank)	E011
FSTUP○○○○○R/L-○○A	DIMPLE BAR (Steel shank)	E010
FSTUP○○○○○R/L-○○E	DIMPLE BAR (Carbide shank)	E011
FSTUP○○○○○R/L-○○S	DIMPLE BAR	E010

ORDER NUMBER	PRODUCT NAME	PAGE
FSTU	FSTU type boring bar	E033
FSVJB	DIMPLE BAR	E020
FSVJC	DIMPLE BAR	E020
FSVPB	DIMPLE BAR (Steel shank)	E019
FSVPB	DIMPLE BAR	E019
FSVPC	DIMPLE BAR (Steel shank)	E019
FSVPC	DIMPLE BAR	E019
FSVUB	DIMPLE BAR (Steel shank)	E018
FSVUB	DIMPLE BAR	E018
FSVUC	DIMPLE BAR (Steel shank)	E018
FSVUC	DIMPLE BAR	E018
FSWL	FSWL type boring bar	E035
FSWUB	DIMPLE BAR (Carbide shank)	E017
FSWUB	DIMPLE BAR (Steel shank)	E016
FSWUB	DIMPLE BAR (Carbide shank)	E017
FSWUB	DIMPLE BAR	E016
FSWUP	DIMPLE BAR (Carbide shank)	E017
FSWUP	DIMPLE BAR (Steel shank)	E016
FSWUP	DIMPLE BAR (Carbide shank)	E017
FSWUP	DIMPLE BAR	E016
FV	Boring unit (Vertical type)	M012
FV-FVPN	Boring unit (Vertical type)	M012
FV-FVSC	Boring unit (Vertical type)	M012
FV-FVSP	Boring unit (Vertical type)	M012
FVPN	Cartridge (For boring unit)	M012
FVSC	Cartridge (For boring unit)	M012
FVSP	Cartridge (For boring unit)	M012

G

GBE	GBE type end mill	J349
GCMT	Insert (For TAF type drill)	N171, N175
GDCN2004PDFR3	Insert (For NF10000/QF10000 type cutter)	L097
GKCD	Leading drills	N182
GOER1401ZXFR2	Insert (For FMAX type cutter)	L093
GOER1408PXFR2-8	Insert (For FMAX type cutter)	L093
GOER	Insert (For FMAX type cutter)	L093
GPMT	Insert (For TAF type drill)	N171
GSD	Straight shank drill, TiN	N210
GTD	Taper shank drill, TiN	N229
GT	Small tools holder (External grooving)	D018
GTTD	Taper shank drill, TiN, For steel frame	N241
GT	Insert for grooving	D019
GT	Insert for grooving	D019
GT	Insert for grooving	D018
GT	Insert for grooving	D019
GW04005F	Clamp Screw	F128
GW1B	Insert (For GW holder)	F130
GW1M	Insert (For GW holder)	F130
GW1M	Insert (For GW holder)	F130
GW1M	Insert (For GW holder)	F130
GW1M	Insert (For GW holder)	F130
GW1M	Inserts for GW blade (For cutting off)	F130
GW	GW blade	F128
GWCW	Clamp Bridge	F129
GWSL	Straight shank drill, TiN, Extra long	N222

ORDER NUMBER	PRODUCT NAME	PAGE
GWSR/L	GW holder	F126-F127
GWSS	Straight shank drill, TiN, Convolute flute	N220
GWTBN	Tool block (For GW blade)	F129
GWTBN	Tool block (For GW blade)	F129
GWTS	Taper shank drill, TiN, Convolute flute	N240
GW	Washer	F128
GWY39L	Wrench	P003
GY05016S	Clamp screw	P004
GY06013M	Clamp screw	P004
GY1B	Insert (For GY holder)	F014
GY1G	Insert (For GY holder)	B054, F012
GY1M	Insert (For GY holder)	F011
GY1M	Insert (For GY holder)	F012
GY2B	Insert (For GY holder)	F014
GY2G	Insert (For GY holder)	F011
GY2G	Insert (For GY holder)	F012
GY2M	Insert (For GY holder)	F013
GY2M	Insert (For GY holder)	F011
GY2M	Insert (For GY holder)	F011
GY2M	Insert (For GY holder)	F011
GY2M	Insert (For GY holder)	F013
GY2M	Insert (For GY holder)	F013
GY2M	Insert (For GY holder)	F013
GY2M	Insert (For GY holder)	F012
GYAR/L	GY holder	F086-F093
GYDR/L	GY holder	F086-F093
GYHR/L	GY holder	F022-F033
GYHR/L	GY holder	F044-F075
GYHR/L	GY holder	F042-F043
GYHR/L	GY holder	F036-F041
GYHR/L	GY holder	F076-F085
GYM	Modular blade	F022-F032, F036-F040, F086-F092, F094-F097
GYM	Modular blade	F044-F084
GYM	Modular blade	F042, F099
GYPR/L	GY holder	F034-F035
GYQR/L	GY holder	F022-F033
GYSR/L	GY holder	F016-F019
GYSR/L	GY holder	F020-F021

H

H	Spare parts (For MK cartridge)	P028
H100TH-B	HSK boring bar holder	H022
H100TH-EN3232R/L-130	HSK boring bar holder	H020
H100TH-EV3232R/L-180	HSK boring bar holder	H019
H63TH-A	HSK DCLN type holder	H008
H63TH-B	HSK boring bar holder	H021
H63TH-DCLNL-L12-3	HSK DCLN type holder	H008
H63TH-DCLNR-L-DX12	HSK DCLN type holder	H006
H63TH-DCMNN-12	HSK DCMN type holder	H007
H63TH-DDJNL-L15-3	HSK DDJN type holder	H011
H63TH-DDJNR-L-DX15	HSK DDJN type holder	H009
H63TH-DDNNN-15	HSK DDNN type holder	H010
H63TH-DG	Spare parts (For HSK-DG)	P023
H63TH-EN2525R/L-115	HSK boring bar holder	H020
H63TH-EV2020R/L-105-3	HSK boring bar holder	H021
H63TH-EV2525R/L-112	HSK boring bar holder	H019

INDEX FOR TOOL NUMBER

ORDER NUMBER	PRODUCT NAME	PAGE
H63TH-MGHR/L-DX43HSK MG type holder.....	H014
H63TH-MMTENR-16HSK MMTE type holder.....	H016
H63TH-MMTER-DX16HSK MMTE type holder.....	H016
H63TH-MTHR/L-DX43HSK MTH type holder.....	H017
H63TH-PCLNR/L-DX12HSK PCLN type holder.....	H006
H63TH-PCMNN-12HSK PCMN type holder.....	H007
H63TH-PDJNR/L-DX15HSK PDJN type holder.....	H009
H63TH-PDNNN-15HSK PDNN type holder.....	H010
H63TH-PRDCN-12HSK PRDC type holder.....	H012
H63TH-PRGCR/L-DX12HSK PRGC type holder.....	H012
H63TH-SVPBR/L-DX16HSK SVPB type holder.....	H013
H63TH-SVVBN-16HSK SVVB type holder.....	H013
HBHClamp screw.....	P002, P005
HBHAClamp screw.....	P002
HDSClamp screw.....	P010
HFCShim pin.....	P005
HFFSet bolt.....	P010
HGJ-PT1/8Plug.....	F129
HGM-PTPlug..... E043, H007, H010, H012, H013, H016	
HKYWrench.....	P003
HLSLever spring.....	L324, M007, M013
HNMX1206E-RInsert (For BMR type boring cutter).....	L333
HOSE-1/8Coolant hose.....	F131
HPClamp pin.....	E043
HP3Spring (For FF3000 type face mill).....	L098
HRSpanner.....	M013
HSCClamp screw.....	P002, P005
HSCClamp screw.....	P010
HSCSet bolt.....	P010
HSCSet bolt.....	P010
HSD04004HCoolant nozzle (For VFX5/6 type cutter).....	P017
HSD05004SPlug.....	F095, F097, F098, F129
HSK-MHSK type taper tool number.....	M029
HSPClamp screw.....	P002, P005
HSSClamp screw.....	P002, P005
HVF06-HSK63A-AValve finisher.....	M002
HVS060519Reamer adjustment screws.....	P011
HYUnit screw.....	P005
HY-A1Unit screw.....	P005
HY-V1Unit screw.....	P005
I		
iMX-B2SIndexable head end mill.....	K048
iMX-B3FVIndexable head end mill.....	K050
iMX-B4HVIndexable head end mill.....	K052
iMX-B4HV-EIndexable head end mill.....	K053
iMX-B4SIndexable head end mill.....	K049
iMX-B4WH-SIndexable head end mill.....	K058
iMX-B6HVIndexable head end mill.....	K056
iMX-C10HVIndexable head end mill.....	K034
iMX-C10T-CIndexable head end mill.....	K043
iMX-C12HVIndexable head end mill.....	K034
iMX-C12T-CIndexable head end mill.....	K043
iMX-C15T-CIndexable head end mill.....	K043
iMX-C3AIndexable head end mill.....	K040
iMX-C4FD-CIndexable head end mill.....	K036

ORDER NUMBER	PRODUCT NAME	PAGE
iMX-C4FVIndexable head end mill.....	K038
iMX-C4HVIndexable head end mill.....	K024
iMX-C4HV-SIndexable head end mill.....	K026
iMX-C6HVIndexable head end mill.....	K034
iMX-C6HV-CIndexable head end mill.....	K032
iMX-C8T-CIndexable head end mill.....	K043
iMX-CH3LIndexable head end mill.....	K060
iMX-CH6VIndexable head end mill.....	K062
iMX-LIndexable head end mill.....	K064
iMX-LIndexable head end mill.....	K065
iMX-R4FIndexable head end mill.....	K044
iMX-RC4F-CIndexable head end mill.....	K046
iMX-S3AIndexable head end mill.....	K021
iMX-S3HVIndexable head end mill.....	K010
iMX-S4HVIndexable head end mill.....	K014
iMX-S4HV-SIndexable head end mill.....	K015
iMX-WRWrench (For indexable head end mill).....	P003
J		
JDMT-ZDER-JLInsert (For AJX/PMC type cutter).....	L235
JDMT-ZDSR-JMInsert (For AJX/PMC type cutter).....	L235, L327
JDMT-ZDSR-STInsert (For AJX/PMC type cutter).....	L235, L327
JDMW-ZDSR-FTInsert (For AJX/PMC type cutter).....	L235, L327
JFSJUST FIT SLEEVE (JFS).....	N177
JOMT-ZZER-JLInsert (For AJX type cutter).....	L235
JOMT-ZZSR-JMInsert (For AJX/PMC type cutter).....	L235, L327
JOMU-ZZERInsert (For WJX09/14 type cutter).....	L245, L252
JOMW-ZZSR-FTInsert (For AJX/PMC type cutter).....	L235, L327
JPGX1404-PPER-JMInsert (For ASPX type cutter).....	L290
JPMTInsert (For TAB/CBJP type cutter).....	L323, L345
JPMXInsert (For SPX type end mill).....	L285
K		
K typeSpare parts (For MK cartridge).....	P028
KGBNTool block (For UG type holder).....	P023
KKC typeSpare parts (For MH type holder).....	P020
KSAxial screw.....	P004
KSClamp screw.....	P004
KSDStraight shank drill, Cobalt HSS, For stainless steel ...	N218
KSMGR-SKSMG type end mill.....	L324
KSN3Micro adjustment Nut.....	P011
KSS2Large adjustment screw.....	P011
KTDTaper shank drill, Cobalt HSS.....	N234
K-XDGX1750-PD-R-GInsert kit (For AXD4000A type cutter).....	L205
L		
LDCN190412RInsert (For AF5000 type face mill).....	L350
LLCLClamp lever.....	P015
LLCLClamp lever.....	P015
LLCSClamp screw.....	P005
LLCS-SClamp screw.....	P005
LLPShim pin.....	P015
LLRRadial screw.....	P005
LLSCNShim.....	P012
LLSCN3T3Shim.....	P012

ORDER NUMBER	PRODUCT NAME	PAGE
LLSCP	Shim	P012
LLSDN	Shim	P012
LLSDP42	Shim	P012
LLSRN	Shim	P012
LLSSN	Shim	P013
LLSSP	Shim	P013
LLSTN	Shim	P013
LLSTP	Shim	P013
LLSWN	Shim	P013
LLSWN	Shim	P013
LLSWP	Shim	P013
LNGU0906	Insert (For VAS300 type cutter)	L127
LNGU1308	Insert (For VAS400 type cutter)	L129
LNGU1710	Insert (For VAS500 type cutter)	L131
LOGU	Insert (For VPX200/300 type cutter)	L161, L167
LRB	Insert for brazed tool holder (MITSUBISHI standard)	I004
LS	Clamp screw	P006
LS	Clamp screw	P006
LS0622T	Clamp screw	P006
LSD	Straight shank drill, Extra long	N225
LSE445 type	Spare parts (For LSE445 type face mill)	P031
LS	Clamp screw	P006
LTD	Taper shank drill, Extra long	N236

M

MAE	MAE type drill (External coolant)	N108
MAS	MAS type drill (Internal coolant)	N104
MBA	Clamp screw	P010
MCAH	MCAH type drill	N117
MCA	MCA type drill	N113
MCCH	MCCH type drill	N116
MCC	MCC type drill	N112
MCLNR	DOUBLE CLAMP type holder (For heavy cutting)	C009
MCT	MCT type drill	N114
MCW	MCW type drill	N115
MES	Spring	C017, E039, F136, G028, H014, H017
MFE	Solid carbide flat bottom drill	N026
MFE	Solid carbide flat bottom drill	N025
MG type	Spare parts (For MG type holder)	P020
MG2 type	Spare parts (For MG2 type holder)	P020
MG200 type	Spare parts (For MG200 type end mill)	P038
MG245 type	Spare parts (For MG245 type end mill)	P038
MG300 type	Spare parts (For MG300 type end mill)	P038
MG300 type	Spare parts (For MG300 type face mill)	P031
MG345 type	Spare parts (For MG345 type end mill)	P038
MG345 type	Spare parts (For MG345 type face mill)	P031
MG400 type	Spare parts (For MG400 type face mill)	P031
MG445 type	Spare parts (For MG445 type face mill)	P031
MGD	Driver	N137
MGEW	Insert (For MG245/345/445 type cutter)	L345
MGEW	Insert (For MG200/300/400 type cutter)	L345
MGHR/L	MG holder	F136
MGP445 type	Spare parts (For MGP445 type face mill)	P031

ORDER NUMBER	PRODUCT NAME	PAGE
MGS	Solid gun drill	N136
MGTL	Insert (For D type boring head/KSMG type end mill)	F147, L325
MGTR/L	Insert (For MG holder)	F137, H015
MHS	MHS type drill (Internal coolant)	N088
MK1KS	Anti-seize lubricant	P017
MLCP42	Shim	P013
MLDP42	Shim	P013
MLG	Insert (For FSL5 type boring bar)	F145, G041
MLSP42	Shim	P013
MLT	Insert (For FSL5 type boring bar)	F145, G041
MLTP32	Shim	P013
MMS	MMS type drill (Internal coolant)	N082
MMT	Insert (For MMTE holder)	G024-G027
MMTER	MMTE holder	G023
MMT	Insert (For MMTI boring bar)	G033-G036
MMTIR	MMTI boring bar	G032
MNS	MNS type drill (Internal coolant)	N098
MNS	MNS type drill (Internal coolant)	N098
MP2ES	MS Plus end mill	J074
MP2MB	MS Plus end mill	J173
MP2SB	MS Plus end mill	J172
MP2SDB	MS Plus end mill	J175
MP2SSB	MS Plus end mill	J171
MP2XLB	MS Plus end mill	J177
MP3ES	MS Plus end mill	J098
MP3XB	MS Plus end mill	J222
MP4EC	MS Plus end mill	J138
MP6	Shim pin	P015
MPJHV	MS Plus end mill	J122
MPMHV	MS Plus end mill	J118
MPMHVRB	MS Plus end mill	J257
MPMT	Insert (For CBMP/ECMP/TAB type end mill)	L323, L345
MPMW	Insert (For TSMP type cutter)	L321
MPMX120412	Insert (For SPX type end mill)	L285
MPXLRB	MS Plus end mill	J261
MR	HSS end mill	J376
MS2ES	MSTAR end mill	J077
MS2JS	MSTAR end mill	J062
MS2LS	MSTAR end mill	J064
MS2MD	MSTAR end mill	J060
MS2MRB	MSTAR end mill	J245
MS2MS	MSTAR end mill	J057
MS2SS	MSTAR end mill	J056
MS2XL	MSTAR end mill	J066
MS2XL6	MSTAR end mill	J070
MS3ES	MSTAR end mill	J101
MS4EC	MSTAR end mill	J141
MS4JC	MSTAR end mill	J132
MS4MC	MSTAR end mill	J130
MS4MRB	MSTAR end mill	J267
MS4SC	MSTAR end mill	J128
MS4XL	MSTAR end mill	J134
MSBNR	DOUBLE CLAMP type holder (For heavy cutting)	C012

INDEX FOR TOOL NUMBER

ORDER NUMBER	PRODUCT NAME	PAGE
MSCN63	Shim	P013
MSD445 type	Spare parts (For MSD445 type face mill)	P031
MSE445 type	Spare parts (For MSE445 type face mill)	P031
MSE445 type	Spare parts (For MSE445 type end mill)	P038
MSE○○○○SB	MSE type drill	N119
MSMHD	MSTAR end mill	J125
MSMHZD	MSTAR end mill	J096
MSP0300SB	MSP type starting drill	N118
MSSHD	MSTAR end mill	J124
MSSN63	Shim	P013
MSSNR○○○○○○○	DOUBLE CLAMP type holder (For heavy cutting)	C014
MT1R/L○○○○○○○	MT1 type holder	G028
MT2 type	Spare parts (For MT2 type holder)	P020
MTEN type	Spare parts (For WP type holder)	P022
MTENN○○○○○○○	WP type holder	C018
MTHR/L○○○○○○○	MT holder	G028
MTJN type	Spare parts (For WP type holder)	P022
MTJNR/L○○○○○○○	WP type holder	C017
MTK○R/L	Clamp bridge	P016
MTNN type	Spare parts (For WP type holder)	P022
MTQN type	Spare parts (For WP type holder)	P022
MTQNR/L○○○○○○○	WP type holder	C018
MTTR/L○○○○○○○	Insert (For MT holder/D type boring head)	G029, G043, H018
MVE○○○○X○○S○○○	MVE type drill (External coolant)	N068
MVS○○○○X○○S○○○	MVS type drill (Internal coolant)	N050
MVS○○○○X○○S○○○	MVS type drill (Internal coolant)	N046
MVS○○○○X○○S○○○	MVS type drill (Internal coolant, Mini-size)	N048
MVS○○○○X○○S○○○PL	MVS type drill (Internal coolant)	N046
MVX○○○○X○F○○○	MVX type drill (Internal coolant)	N160
MWLN type	Spare parts (For WP type holder)	P022
MWS○○○○LB/SB/XB	MWS type drill (Internal coolant)	N122
MWS○○○○X○○DB	MWS type drill (Internal coolant)	N124
MZE○○○○MA/SA/SB	MZE type drill (External coolant)	N130

N

NA type	Spare parts (For boring unit)	P027
NAPN type	Spare parts (For boring unit)	P027
NASP type	Spare parts (For boring unit)	P027
NF1000R○○○○○	NF1000 type face mill	L096
NKY15S	Wrench	P003
NNMU130508ZE○-○	Insert (For AHX440S type cutter)	L064
NNMU130532ZEN-○	Insert (For AHX440S/475S type cutter)	L064, L068
NNMU200608ZEN-○○	Insert (For AHX640S/640W type cutter)	L073, L081
NNMU2007○○ZE○-○○	Insert (For AHX640S type cutter)	L073
NP-CCGW○○○○○○FA2	Insert (Class G tolerance)	B040
NP-CCGW○○○○○○FBWL2	Insert (Class G tolerance)	B041
NP-CCGW○○○○○○FS	Insert (Class G tolerance)	B041
NP-CCGW○○○○○○FS2	Insert (Class G tolerance)	B040
NP-CCGW○○○○○○FSWS2	Insert (Class G tolerance)	B041
NP-CCGW○○○○○○GA2	Insert (Class G tolerance)	B040
NP-CCGW○○○○○○GAWS2	Insert (Class G tolerance)	B041
NP-CCGW○○○○○○GBWL2	Insert (Class G tolerance)	B041

ORDER NUMBER	PRODUCT NAME	PAGE
NP-CCGW○○○○○○GH2	Insert (Class G tolerance)	B040
NP-CCGW○○○○○○GS	Insert (Class G tolerance)	B041
NP-CCGW○○○○○○GS2	Insert (Class G tolerance)	B040
NP-CCGW○○○○○○GSWS2	Insert (Class G tolerance)	B041
NP-CCGW○○○○○○SE2	Insert (Class G tolerance)	B041
NP-CCGW○○○○○○SF2	Insert (Class G tolerance)	B040
NP-CCGW○○○○○○TA2	Insert (Class G tolerance)	B040
NP-CCGW○○○○○○TH2	Insert (Class G tolerance)	B040
NP-CCGW○○○○○○TS2	Insert (Class G tolerance)	B040
NP-CCGW○○○○○○VA2	Insert (Class G tolerance)	B040
NP-CCMH○○○○○○○	Insert (Class M tolerance)	B059
NP-CCMW○○○○○○○	Insert (Class M tolerance)	B059
NP-CNGA○○○○○○FBWL2	Insert (Class G tolerance)	B024
NP-CNGA○○○○○○FS2	Insert (Class G tolerance)	B023
NP-CNGA○○○○○○FS4	Insert (Class G tolerance)	B022
NP-CNGA○○○○○○FSWS2	Insert (Class G tolerance)	B024
NP-CNGA○○○○○○FSWS4	Insert (Class G tolerance)	B022
NP-CNGA○○○○○○GA2	Insert (Class G tolerance)	B023
NP-CNGA○○○○○○GA4	Insert (Class G tolerance)	B022
NP-CNGA○○○○○○GAWS2	Insert (Class G tolerance)	B024
NP-CNGA○○○○○○GAWS4	Insert (Class G tolerance)	B022
NP-CNGA○○○○○○GBWL2	Insert (Class G tolerance)	B024
NP-CNGA○○○○○○GH2	Insert (Class G tolerance)	B023
NP-CNGA○○○○○○GH4	Insert (Class G tolerance)	B022
NP-CNGA○○○○○○GS2	Insert (Class G tolerance)	B023
NP-CNGA○○○○○○GS4	Insert (Class G tolerance)	B022
NP-CNGA○○○○○○GSWS2	Insert (Class G tolerance)	B024
NP-CNGA○○○○○○GSWS4	Insert (Class G tolerance)	B022
NP-CNGA○○○○○○SE2	Insert (Class G tolerance)	B023
NP-CNGA○○○○○○SF2	Insert (Class G tolerance)	B023
NP-CNGA○○○○○○TA2	Insert (Class G tolerance)	B023
NP-CNGA○○○○○○TA4	Insert (Class G tolerance)	B022
NP-CNGA○○○○○○TH2	Insert (Class G tolerance)	B023
NP-CNGA○○○○○○TH4	Insert (Class G tolerance)	B022
NP-CNGA○○○○○○TS2	Insert (Class G tolerance)	B023
NP-CNGA○○○○○○TS4	Insert (Class G tolerance)	B022
NP-CNGA○○○○○○VA2	Insert (Class G tolerance)	B023
NP-CNGA○○○○○○VA4	Insert (Class G tolerance)	B022
NP-CNMA○○○○○○F	Insert (Class M tolerance)	B025
NP-CNMA○○○○○○GS	Insert (Class M tolerance)	B025
NP-CNMA○○○○○○OT	Insert (Class M tolerance)	B025
NP-CNMM○○○○○○R/L-F	Insert (Class M tolerance)	B055
NP-CPGB○○○○○○FS2	Insert (Class G tolerance)	B043
NP-CPGB○○○○○○GA2	Insert (Class G tolerance)	B043
NP-CPGB○○○○○○GS2	Insert (Class G tolerance)	B043
NP-CPGB○○○○○○SE2	Insert (Class G tolerance)	B043
NP-CPGB○○○○○○TA2	Insert (Class G tolerance)	B043
NP-CPGB○○○○○○VA2	Insert (Class G tolerance)	B043
NP-CPMH○○○○○○○	Insert (Class M tolerance)	B059
NP-DCGW○○○○○○FA2	Insert (Class G tolerance)	B044
NP-DCGW○○○○○○FS2	Insert (Class G tolerance)	B044
NP-DCGW○○○○○○GA2	Insert (Class G tolerance)	B044
NP-DCGW○○○○○○GH2	Insert (Class G tolerance)	B044
NP-DCGW○○○○○○GS	Insert (Class G tolerance)	B045
NP-DCGW○○○○○○GS2	Insert (Class G tolerance)	B044
NP-DCGW○○○○○○SE2	Insert (Class G tolerance)	B044

INDEX FOR TOOL NUMBER

ORDER NUMBER	PRODUCT NAME	PAGE
NP-VNGA○○○○○○TA2	Insert (Class G tolerance)	B036
NP-VNGA○○○○○○TA4	Insert (Class G tolerance)	B035
NP-VNGA○○○○○○TH2	Insert (Class G tolerance)	B036
NP-VNGA○○○○○○TH4	Insert (Class G tolerance)	B035
NP-VNGA○○○○○○TS2	Insert (Class G tolerance)	B036
NP-VNGA○○○○○○TS4	Insert (Class G tolerance)	B035
NP-VNGA○○○○○○VA2	Insert (Class G tolerance)	B035
NP-VNGA○○○○○○VA4	Insert (Class G tolerance)	B035
NP-VNMA○○○○○○F	Insert (Class M tolerance)	B036
NP-VNMA○○○○○○GS	Insert (Class M tolerance)	B036
NP-VNMA○○○○○○T	Insert (Class M tolerance)	B036
NP-VNMM○○○○○○R/L-F	Insert (Class M tolerance)	B057
NP-WCMW○○○○○○FA	Insert (Class M tolerance)	B051
NP-WNGA○○○○○○FS3	Insert (Class G tolerance)	B037
NP-WNGA○○○○○○FS6	Insert (Class G tolerance)	B037
NP-WNGA○○○○○○GA3	Insert (Class G tolerance)	B037
NP-WNGA○○○○○○GH3	Insert (Class G tolerance)	B037
NP-WNGA○○○○○○GS3	Insert (Class G tolerance)	B037
NP-WNGA○○○○○○GS6	Insert (Class G tolerance)	B037
NP-WNGA○○○○○○GSWS3	Insert (Class G tolerance)	B037
NP-WNGA○○○○○○SE3	Insert (Class G tolerance)	B037
NP-WNGA○○○○○○SF3	Insert (Class G tolerance)	B037
NP-WNGA○○○○○○TA3	Insert (Class G tolerance)	B037
NP-WNGA○○○○○○TH3	Insert (Class G tolerance)	B037
NP-WNGA○○○○○○TS3	Insert (Class G tolerance)	B037
NP-WNGA○○○○○○TS6	Insert (Class G tolerance)	B037
NPX type	Spare parts (For NPX type drill)	P044
NR10000 type	Spare parts (For NR10000 type face mill)	P031
NS○○○	Clamp screw	P006
NSE300 type	Spare parts (For NSE300 type face mill)	P032
NSE300 type	Spare parts (For NSE300 type end mill)	P038
NSE400 type	Spare parts (For NSE400 type face mill)	P032
NSE400 type	Spare parts (For NSE400 type end mill)	P038
NS○○○W	Clamp screw	P006
NTF type	Spare parts (For F type boring bar)	P025
NV type	Spare parts (For boring unit)	P027
NVPN type	Spare parts (For boring unit)	P027
NVSP type	Spare parts (For boring unit)	P027
NZ22042080S	Nozzle	F095, F097, F098

O

OCTACUT○○○○○○○	OCTACUT type face mill	L259, L260
OCTACUT○○○S32○○	OCTACUT type end mill	L258
OEMX○○○○○EOR1	Insert (For OCTACUT type cutter)	L261
OEMX○○○○○EOR1-JS	Insert (For OCTACUT type cutter)	L261
ORGW○○○N9	O-ring	F129

P

P425 type	Spare parts (For P425 type face mill)	P032
P525 type	Spare parts (For P525 type face mill)	P032
P○○○AM	Pin	E043
PCBN type	Spare parts (For LL type holder)	P019
PCBNR/L○○○○○○○	LL type holder	C009
PCFN type	Spare parts (For LL type holder)	P019
PCLN type	Spare parts (For LL type holder)	P019
PCLNR/L○○○○○○○	LL type holder	C008

ORDER NUMBER	PRODUCT NAME	PAGE
PCLNR/L○○○CA○○	LL type cartridge	M006
PDHNR/L○○○○○○○	LL type holder	C011
PDJNR/L○○○○○○○	LL type holder	C010
PDNN type	Spare parts (For LL type holder)	P019
PMC○○○R○○○AM○○○○	PMC type end mill	L326
PMF○○○○○○A○○R	PMF type end mill	L328
PMFA○○○R	Cartridge (For PMF type end mill)	L328
PMR type	Spare parts (For PMR type end mill)	P038
PMR○○○○○○A○○R	PMR type end mill	L330
PMR○○○○○○○R	PMR type end mill	L330
PRDC type	Spare parts (For LL type holder)	P019
PRDCN○○○○○○○	LL type holder	C025
PRGC type	Spare parts (For LL type holder)	P019
PRGCR/L○○○○○○○	LL type holder	C025
P○○S	Lock pin	P016
PS○○	Shim	P013
PSBN type	Spare parts (For LL type holder)	P019
PSBNR/L○○○○○○○	LL type holder	C012
PSDNN○○○○○○○	LL type holder	C014
PSKN type	Spare parts (For LL type holder)	P019
PSKN type	Spare parts (For LL cartridge)	P028
PSKNR/L○○○○○○○	LL type holder	C015
PSKNR/L○○○CA○○	LL type cartridge	M006
PSSN type	Spare parts (For LL type holder)	P019
PSSN type	Spare parts (For LL cartridge)	P028
PSSNR/L○○○○○○○	LL type holder	C013
PSSNR/L○○○CA○○	LL type cartridge	M006
PSTNR/L○○○○○○○	LL type holder	C013
PSYN type	Spare parts (For LL cartridge)	P028
PSYNR○○○CA○○	LL type cartridge	M006
PT○○	Shim	P014
PTAN type	Spare parts (For LL type holder)	P019
PTBN type	Spare parts (For LL type holder)	P019
PTFE type	Spare parts (For AL type holder)	P022
PTFN type	Spare parts (For LL type holder)	P019
PTFNR/L○○○○○○○	LL type holder	C017
PTFNR/L○○○CA○○	LL type cartridge	M006
PTGE type	Spare parts (For AL type holder)	P022
PTGN type	Spare parts (For LL type holder)	P019
PTGNR/L○○○○○○○	LL type holder	C016
PTGNR/L○○○CA○○	LL type cartridge	M006
PTTN type	Spare parts (For LL type holder)	P019
PTTNR○○○CA○○	LL type cartridge	M006
PV○○○	Shim	P014
PVJNR/L○○○○○○○	MP type holder	C019
PVPN type	Spare parts (For MP type holder)	P020
PVPNR/L○○○○○○○	MP type holder	C021
PVVN type	Spare parts (For MP type holder)	P020
PVVNN○○○○○○○	MP type holder	C020
PWLNR/L○○○○○○○	LL type holder	C022

Q

QB○○○○○○○	Q type quick change	M023
QBF407 type	Spare parts (For QBF407 type face mill)	P032
QBP415 type	Spare parts (For QBP415 type face mill)	P032
QF10000 type	Spare parts (For QF10000 type face mill)	P032

ORDER NUMBER	PRODUCT NAME	PAGE
QFA○○○○○○○	T type quick change	M021
QFA○○○○○○○BOR/L	Q type quick change	M020
QFA○○○○○○○NOR/L	Q type quick change	M020
QFB○○○○○○○R/L	Q type quick change	M021
QOGT○○○○○R-G1	Insert (For AQX type cutter)	L223
QOMT○○○○○R-M2	Insert (For AQX type cutter)	L223
QSE415 type	Spare parts (For QSE415 type face mill)	P033

R

RBH○○○○○N	Round type holder (For MICRO-DEX/MICROMINI type boring bar) ...	E026, E031, F142, G039
RCGT○○○○○M0-AZ	Insert (Class G tolerance)	A131
RCMT○○○○○M0	Insert (Class M tolerance)	A131
RCMX○○○○○M0	Insert (Class M tolerance)	A131
RCMX○○○○○M0-RR	Insert (Class M tolerance)	A131
RDMW○○○○○M0E	Insert (For ARX type cutter)	L270
REM1705SN	Insert (For OCTACUT type cutter)	L261
REM○○○○○EN-JS	Insert (For OCTACUT type cutter)	L261
RGEN2004M0○N	Insert (For SG20 type cutter)	L345
RKY25S	Wrench	P003
RNGN○○○○○○○	Insert (Class G tolerance)	B038
RNMG○○○○○○○	Insert (Class M tolerance)	A088
RPH/MT○○○○○M0E4○	Insert (For ARP type cutter)	L267
RPMT○○○○○M0E-JS	Insert (For BRP type cutter)	L277
RPMW○○○○○M0○	Insert (For BRP type cutter)	L277
RS○○○○○T	Clamp screw	P006
RTG○○○	Insert (For TL type holder)	A154, C035

S

S○	Clamp screw	P006
S2SDA	HSS end mill	J363
SBA○○○-ES-M	Parts for ABS head	M027
SBA○○○-ES-M○	Parts for ABS head	M027
SBAHR○○○○○	Boring holder	D030
SBAT○○○○○○○L	Insert (For SBAHR type holder)	D030
SBAT○○○○○○○L-B	Insert (For SBAHR type holder)	D030
SBH○○○○○R	Square type holder (For MICRO-DEX/MICROMINI type boring bar) ...	E032, F143, G038
SBR○○○	MI holder	M017
SCACR/L○○○○○○○-SM	Small tools holder (External front turning)	D010
SCLCR/L○○○○○○○	SP type holder	C023
SCLCR/L○○○○○○○-SM	Small tools holder (External front turning)	D010
SC○○M○○S10-BT○○	Arbors for screw-in tools	L342
SC○○M○○S○○-HSK63A	Arbors for screw-in tools	L342
SC○○M○○S○○○S/L	Arbors for screw-in tools	L341
SC○○M○○S○○○SW/LW	Arbors for screw-in tools	L341
SCMT○○○○○○○	Insert (Class M tolerance)	A133
SCMT○○○○○○○-FM	Insert (Class M tolerance)	A132
SCMT○○○○○○○-FP	Insert (Class M tolerance)	A132
SCMT○○○○○○○-FV	Insert (Class M tolerance)	A132
SCMT○○○○○○○-LM	Insert (Class M tolerance)	A132
SCMT○○○○○○○-LP	Insert (Class M tolerance)	A132
SCMT○○○○○○○-MK	Insert (Class M tolerance)	A133
SCMT○○○○○○○-MM	Insert (Class M tolerance)	A133
SCMT○○○○○○○-MP	Insert (Class M tolerance)	A132
SCMT○○○○○○○-MS	Insert (Class M tolerance)	A133

ORDER NUMBER	PRODUCT NAME	PAGE
SCMW○○○○○○○	Insert (Class M tolerance)	A133
SD	Straight shank drill	N212
SD	Straight shank drill	N214
SD○○	Set bolt	P006
SDEN1203AEN	Insert (For FMSD type cutter)	L345
SDFC type	Spare parts (For SP type holder)	P021
SDJC type	Spare parts (For SP type holder)	P021
SDJCR/L○○○○○○○	SP type holder	C024
SDJCR/L○○○○○○○-SM	Small tools holder (External front turning)	D011
SDJER/L○○○○○○○	AL type holder	C032
SDLS	Long shank straight drill	N215
SDNCN○○○○○○○	SP type holder	C024
SDNCR/L○○○○○○○-SM	Small tools holder (External front turning)	D011
SDNEN○○○○○○○	AL type holder	C032
SDXC type	Spare parts (For SP type holder)	P021
SE300 type	Spare parts (For SE300 type face mill)	P033
SE300 type	Spare parts (For SE300 type end mill)	P039
SE400 type	Spare parts (For SE400 type face mill)	P033
SE415 type	Spare parts (For SE415 type face mill)	P033
SE445 type	Spare parts (For SE445 type face mill)	P033
SE515 type	Spare parts (For SE515 type face mill)	P033
SE545 type	Spare parts (For SE545 type face mill)	P034
SEA42C10GR/L	Insert (For E404/FE404 type cutter)	L339, L345
SECN○○○○○AFTN1	Insert (For SE445 type cutter)	L345
SECN○○○○○EFOR1	Insert (For SE415/515 type cutter)	L346
SED2KMG	Key way slotting end mill	J089
SED2KPG	Key way slotting end mill	J090
SEEN○○○○○AFON1	Insert (For SE445/545 type cutter)	L345, L346
SEEN○○○○○EFOR1	Insert (For SE415/515 type cutter)	L346
SEER1203EFER-JS	Insert (For SE415 type cutter)	L346
SEER○○○○○AFEN-JS	Insert (For SE445/545 type cutter)	L346
SEET13T3AGEN-JL	Insert (For ASX445 type cutter)	L057
SEF○○○	Setting fixture	L340
SEG4SA	Carbide end mill	J162
SEGT13T3AGFN-JP	Insert (For ASX445 type cutter)	L057
SEMT13T3AGSN-○○	Insert (For ASX445 type cutter)	L057
SEPDM	HSS milling shank drill	N186
SEPDS	HSS milling shank drill	N184
SETH type	Spare parts (For SET type holder)	P021
SETK○○	Clamp bridge	P016
SETS○○	Clamp screw	P006
SFAN1203ZFFR/L2	Insert (For BF407/QBF407 type cutter)	L346
SFCN1203ZFFR/L2	Insert (For BF407/QBF407 type cutter)	L346
SG20 type	Spare parts (For SG20 type face mill)	P033
SH○○○-FSDUCL○○	Small tools holders (For opposite tool posts)	D026
SHP400 type	Spare parts (For SHP400 type face mill)	P034
SHP400 type	Spare parts (For SHP400 type end mill)	P039
SL32○○-90	Sleeve (For H100THB32-135)	H022
SLCS○○○	Clamp screw	P006
SL-ONEN120404ASN	Insert (For AOX445 type cutter)	L088
SMGHR○○○○○○○	SMG holder	F138, G030
SMGTR○○○○○○○	Insert (For SMG holder)	F138, G031
SMTTR○○○○○○○	Insert (For SMG holder)	F138, G031
SNC43B2○	Insert (For DN/BN425 type face mill)	L346

INDEX FOR TOOL NUMBER

ORDER NUMBER	PRODUCT NAME	PAGE	ORDER NUMBER	PRODUCT NAME	PAGE
SNGA	Insert (Class G tolerance)	A094, B031, B056	SPGX1204100PPER-JM	Insert (For ASPX type cutter)	L290
SNGG	Insert (Class G tolerance)	A092	SPMN	Insert (Class M tolerance)	A155, L347
SNGN	Insert (Class G tolerance)	A112, B039, B058	SPMN	Insert (Class M tolerance)	A155, L347
SNGU	Insert (For WSX445 type cutter)	L045	SPMR	Insert (Class M tolerance)	A155
SNMA	Insert (Class M tolerance)	A094	SPMT	Insert (Class M tolerance)	A134
SNMF43B2G	Insert (For DN/BN425 type face mill)	L347	SPMT120408-A	Insert (For TBE1 type cutter)	L348
SNMG	Insert (Class M tolerance)	A092	SPMW	Insert (Class M tolerance)	A134, L319
SNMG	Insert (Class M tolerance)	A089	SPMX120408-00	Insert (For SPX type cutter)	L285
SNMG	Insert (Class M tolerance)	A089	SPNN1203EEER/L1	Insert (For FBP415 type cutter)	L347
SNMG	Insert (Class M tolerance)	A089	SPSVN32	Shim	P014
SNMG	Insert (Class M tolerance)	A093	SPX4-000A24A058RA	SPX type end mill	L284
SNMG	Insert (Class M tolerance)	A091	SPX4R	SPX type end mill	L284
SNMG	Insert (Class M tolerance)	A091	SPX4R	SPX type end mill	L283
SNMG	Insert (Class M tolerance)	A089	SPX4R	SPX type end mill	L283
SNMG	Insert (Class M tolerance)	A089	SPX4R	SPX type end mill	L283
SNMG	Insert (Class M tolerance)	A091	SRBT	Insert (For SRF type cutter)	L302
SNMG	Insert (Class M tolerance)	A091	SRDC type	Spare parts (For SP type holder)	P021
SNMG	Insert (Class M tolerance)	A091	SRDCN	SP type holder	C026
SNMG	Insert (Class M tolerance)	A091	SRE type	Spare parts (For SRE type end mill)	P039
SNMG	Insert (Class M tolerance)	A090	SRFH	SRF/SUF type end mill	L301, L305
SNMG	Insert (Class M tolerance)	A090	SRFH	SRF/SUF type end mill	L300, L304
SNMG	Insert (Class M tolerance)	A091	SRFH	SRF/SUF type end mill (Carbide shank)	L301, L305
SNMG	Insert (Class M tolerance)	A093	SRFT	Insert (For SRF type cutter)	L302
SNMG	Insert (Class M tolerance)	A092	SRGC type	Spare parts (For SP type holder)	P021
SNMG	Insert (Class M tolerance)	A092	SRG	Insert (For SRM2 type cutter)	L311, L317
SNMG	Insert (Class M tolerance)	A093	SRGCR/L	SP type holder	C026
SNMG	Insert (Class M tolerance)	A090	SRM2	SRM2 type end mill	L310
SNMG	Insert (Class M tolerance)	A090	SRM2	SRM2 type end mill	L316
SNMM	Insert (Class M tolerance)	A093	SRM2	SRM2 type end mill	L308, L309
SNMM	Insert (Class M tolerance)	A094	SRM	Insert (For SRM2 type cutter)	L311
SNMM	Insert (Class M tolerance)	A093	SRSG type	Spare parts (For SR type holder)	P021
SNMM	Insert (Class M tolerance)	A093	SRXC type	Spare parts (For SP type holder)	P021
SNMM	Insert (Class M tolerance)	A093	SSBC type	Spare parts (For SP type holder)	P021
SNMM	Insert (Class M tolerance)	A094	S	S type boring bar (Steel shank)	E038
SNMN	Insert (Class M tolerance)	A112, L347	S	Spare parts (For COBRA boring bar)	P024
SNMU1206C05ZNER-M	Insert (For WSF406W type cutter)	L085	S	Spare parts (For S type boring bar)	P026
SNMU	Insert (For WSX445 type cutter)	L045	S	S type boring bar (Steel shank)	E042
SNTF type	Spare parts (For F type boring bar)	P025	S	Spare parts (For S type boring bar)	P026
SOET12T308PEER-JL	Insert (For ASX400 type cutter)	L120	S	S type boring bar (Steel shank)	E039
SOGT12T308PEFR-JP	Insert (For ASX400 type cutter)	L120	S	S type boring bar (Steel shank)	E037
SOGX	Insert (For MVX type drill)	N167	S	Spare parts (For S type boring bar)	P026
SOMT12T300PEER/L	Insert (For ASX400 type cutter)	L120, L135	SSKP type	Spare parts (For SS cartridge)	P028
SOMX	Insert (For MVX type drill)	N167	SSKPR	SS type cartridge	M010
SONX1206PER/L	Insert (For VOX400/VOS400 type cutter)	L114, L134	SSSCR/L	SP type holder	C027
SPC	Insert (For FF3000 type cutter)	L099	S	Spare parts (For S type boring bar)	P026
SPEN1203EEER/L1	Insert (For FBP415 type cutter)	L347	S	S type boring bar (Steel shank)	E041
SPEN1203EETR1	Insert (For FBP415 type cutter)	L350	SSSP type	Spare parts (For SS cartridge)	P028
SPEN	Insert (For FP490/590 type cutter)	L335, L337	SSSPR	SS type cartridge	M010
SPEN	Insert (For corner angle 15° type cutter)	L347	S	S type boring bar (Steel shank)	E036
SPER1203EEER-JS	Insert (For FBP415 type cutter)	L347	S	AL type boring bar (Steel shank)	E051
SPGN	Insert (Class G tolerance)	A155, B052, B068, L347	S	Spare parts (For COBRA boring bar)	P024
SPGR	Insert (Class G tolerance)	A155	SSTP type	Spare parts (For SS cartridge)	P028
SPGX	Insert (Class G tolerance)	A134, B060	S	S type boring bar (Steel shank)	E040
			S	S type boring bar (Steel shank)	E041
			S	Spare parts (For COBRA boring bar)	P024

ORDER NUMBER	PRODUCT NAME	PAGE
SSYP type	Spare parts (For SS cartridge)	P028
SSYPR ○○○CA○○	SS type cartridge	M010
STASX ○○○N.....	Shim	P014
STAWN ○○○○○○S○○	STAW type drill (General use)	N144
STAWN ○○○○○T.....	Insert (For STAW type drill)	N148
STAWN ○○○○○TH.....	Insert (For STAW type drill)	N147
STAWS ○○○○○○S○○	STAW type drill (General use)	N144
STFER/L ○○○○○○○○○	AL type holder	C033
STFP type	Spare parts (For SS cartridge)	P028
STFPR/L ○○○CA○○	SS type cartridge	M010
STGCR/L ○○○○○○○○○	SP type holder	C028
STGER/L ○○○○○○○○○	AL type holder	C033
STGP type	Spare parts (For SS cartridge)	P028
STGPR ○○○CA○○	SS type cartridge	M010
STLG type	Spare parts (For STLG type end mill).....	P039
STPMR ○○N.....	Shim	P014
STSP type	Spare parts (For SS cartridge)	P028
STTP type	Spare parts (For SS cartridge)	P028
STTPR ○○○CA○○	SS type cartridge	M010
SUFT ○○○R○○	Insert (For SUF type cutter).....	L306
SVJBR/L ○○○○○○○○○-SM	Small tools holder (External front turning)...	D012
SVJC type	Spare parts (For SP type holder).....	P021
SVJCR/L ○○○○○○○○○	SP type holder	C029
SVJCR/L ○○○○○○○○○-SM	Small tools holder (External front turning)...	D013
SVJDR/L ○○○○○○○○○	AL type holder	C034
SVLPR/L ○○○○○○○○○-SM	Small tools holder (External front turning)...	D012
SVPC type	Spare parts (For SP type holder).....	P021
SVPCR/L ○○○○○○○○○	SP type holder	C030
SVPD type	Spare parts (For AL type holder)	P022
SVPPR/L ○○○○○○○○○-SM	Small tools holder (External front turning)...	D013
SVVBR/L ○○○○○○○○○-SM	Small tools holder (External front turning)...	D013
SVVC type	Spare parts (For SP type holder).....	P021
SVVCN ○○○○○○○○○	SP type holder	C029
SVVDN type	Spare parts (For AL type holder)	P022
SXZCR/L ○○○○○○○○○	Profile type holder.....	C031

T

TAB type	Spare parts (For TAB type drill)	P044
TAFL/M/S ○○○○○F○○	TAF type drill.....	N171
TAGS/M type	Spare parts (For TAGS/TAGM type drill)...	P043
TASS type	Spare parts (For TASS type drill).....	P042
TAW type	Spare parts (For TAW type drill)	P045
TAWBH ○○○○○T.....	Insert (For TAW type drill).....	N159
TAW ○○B○○○○S32	TAW type drill (For bridge construction) ...	N159
TAWC12T301-45GM	Insert (For TAW type drill chamfering module)... N157	
TAWNH ○○○○○T.....	Insert (For TAW type drill).....	N156
TAWN ○○○○○○S○○	TAW type drill (General use).....	N151
TBE1 type	Spare parts (For TBE1 type end mill)	P040
TBE2 type	Spare parts (For TBE2 type end mill)	P040
TBGN ○○○○○○○	Insert (Class G tolerance).....	B053
TCGN ○○○○○○○	Insert (Class G tolerance).....	A156
TCGT ○○○○○○○-AZ	Insert (Class G tolerance).....	A135
TCGT ○○○○○○○MR/L-F	Insert (Class G tolerance).....	A135
TCGT ○○○○○○○R/L-F	Insert (Class G tolerance).....	A135
TCGW ○○○○○○○	Insert (Class G tolerance).....	A137, B061

ORDER NUMBER	PRODUCT NAME	PAGE
TCMT ○○○○○○○	Insert (Class M tolerance)	A137
TCMT ○○○○○○○-FM	Insert (Class M tolerance)	A135
TCMT ○○○○○○○-FP	Insert (Class M tolerance)	A135
TCMT ○○○○○○○-FV	Insert (Class M tolerance)	A135
TCMT ○○○○○○○-LM	Insert (Class M tolerance)	A136
TCMT ○○○○○○○-LP	Insert (Class M tolerance)	A136
TCMT ○○○○○○○-LS	Insert (Class M tolerance)	A136
TCMT ○○○○○○○-MK	Insert (Class M tolerance)	A137
TCMT ○○○○○○○-MM	Insert (Class M tolerance)	A137
TCMT ○○○○○○○-MP	Insert (Class M tolerance)	A136
TCMT ○○○○○○○-MS	Insert (Class M tolerance)	A137
TCMW ○○○○○○○	Insert (Class M tolerance) ...	A137, B046, B061
TD	Taper shank drill	N230
TECN1603PE ○R1W	Insert (For NSE300/SE300 type cutter)...	L348
TECN ○○○○○PE○R1	Insert (For NSE300/NSE400 type cutter)...	L348
TEEN ○○○○○PE○R1	Insert (For NSE300/NSE400 type cutter)...	L348
TEER ○○○○○PEER-JS	Insert (For NSE300/400/SE300 type cutter)..... L348	
TEGX ○○○○○○○	Insert (For AL type holder).....	B066
TEGX ○○○○○○○R/L	Insert (For AL type holder).....	A138, B066
TFS ○○○○○	Embedded seat screw (For MMTI boring bar)... G032	
TIP ○○○	Wrench	P003
TKY ○○○	Wrench	P003
TLHR ○○○○○	TL type holder.....	C035
TNGA ○○○○○○○	Insert (Class G tolerance)....	A101, B033, B056
TNGG ○○○○○○○R/L	Insert (Class G tolerance).....	A099
TNGG ○○○○○○○-R/L-F	Insert (Class G tolerance).....	A095
TNGG ○○○○○○○-R/L-FS	Insert (Class G tolerance).....	A095
TNGG ○○○○○○○-R/L-K	Insert (Class G tolerance).....	A097
TNGN ○○○○○○○	Insert (Class G tolerance).....	A113, B039
TNMA ○○○○○○○	Insert (Class M tolerance)	A101
TNMG ○○○○○○○	Insert (Class M tolerance)	A099
TNMG ○○○○○○○-FH	Insert (Class M tolerance)	A095
TNMG ○○○○○○○-FP	Insert (Class M tolerance)	A095
TNMG ○○○○○○○-FS	Insert (Class M tolerance)	A095
TNMG ○○○○○○○-FY	Insert (Class M tolerance)	A095
TNMG ○○○○○○○-GH	Insert (Class M tolerance)	A101
TNMG ○○○○○○○-GK	Insert (Class M tolerance)	A098
TNMG ○○○○○○○-GM	Insert (Class M tolerance)	A098
TNMG ○○○○○○○-LK	Insert (Class M tolerance)	A096
TNMG ○○○○○○○-LM	Insert (Class M tolerance)	A096
TNMG ○○○○○○○-LP	Insert (Class M tolerance)	A096
TNMG ○○○○○○○-LS	Insert (Class M tolerance)	A096
TNMG ○○○○○○○-MA	Insert (Class M tolerance)	A098
TNMG ○○○○○○○-MH	Insert (Class M tolerance)	A098
TNMG ○○○○○○○-MJ	Insert (Class M tolerance)	A097
TNMG ○○○○○○○-MK	Insert (Class M tolerance)	A097
TNMG ○○○○○○○-MM	Insert (Class M tolerance)	A097
TNMG ○○○○○○○-MP	Insert (Class M tolerance)	A097
TNMG ○○○○○○○-MS	Insert (Class M tolerance)	A097-A098
TNMG ○○○○○○○-RK	Insert (Class M tolerance)	A100
TNMG ○○○○○○○-R/L-2G	Insert (Class M tolerance)	A099
TNMG ○○○○○○○-R/L-ES	Insert (Class M tolerance)	A099
TNMG ○○○○○○○-RM	Insert (Class M tolerance)	A100
TNMG ○○○○○○○-RP	Insert (Class M tolerance)	A100

INDEX FOR TOOL NUMBER

ORDER NUMBER	PRODUCT NAME	PAGE	ORDER NUMBER	PRODUCT NAME	PAGE
TNMG○○○○○○-RS	Insert (Class M tolerance)	A100	VAPDSSUS	VIOLET drill	N199
TNMG○○○○○○-SA	Insert (Class M tolerance)	A096	VAS300	VAS300 type side cutter	L126
TNMG○○○○○○-SH	Insert (Class M tolerance)	A096	VAS400	VAS400 type side cutter	L128
TNMG○○○○○○-SY	Insert (Class M tolerance)	A097	VAS500	VAS500 type side cutter	L130
TNMM○○○○○○-HL	Insert (Class M tolerance)	A101	VASFPR	VIOLET end mill	J370
TNMM○○○○○○-HZ	Insert (Class M tolerance)	A101	VBET○○○○○○R/L-SN	Insert (Class E tolerance)	A144
TNMN○○○○○○	Insert (Class M tolerance)	A113	VBET○○○○○○R/L-SR	Insert (Class E tolerance)	A144
TNMX○○○○○○-MW	Insert (Class M tolerance)	A099	VBET○○○○○○R/LW-SN	Insert (Class E tolerance)	A144
TNMX○○○○○○-SW	Insert (Class M tolerance)	A097	VBGT○○○○○○R/L-F	Insert (Class G tolerance)	A142
TPEN○○○○P○R	Insert (For corner angle 0° type cutter)	L348	VBMT○○○○○○-FM	Insert (Class M tolerance)	A142
TPEW○○○○ZP○R2	Insert (For PMF type cutter)	L328	VBMT○○○○○○-FP	Insert (Class M tolerance)	A142
TPGH○○○○○○R/L-FS	Insert (Class G tolerance)	A139	VBMT○○○○○○-FV	Insert (Class M tolerance)	A142
TPGN○○○○○○	Insert (Class G tolerance)	A157, B053, B068	VBMT○○○○○○-LM	Insert (Class M tolerance)	A142
TPGR○○○○○○R/L	Insert (Class G tolerance)	A157	VBMT○○○○○○-LP	Insert (Class M tolerance)	A142
TPGT○○○○○○R/L-F	Insert (Class G tolerance)	B062	VBMT○○○○○○-LS	Insert (Class M tolerance)	A143
TPGV○○○○○○R/L-F	Insert (Class G tolerance)	B063	VBMT○○○○○○-MK	Insert (Class M tolerance)	A143
TPGX○○○○○○	Insert (Class G tolerance)	A141, B048, B063	VBMT○○○○○○-MM	Insert (Class M tolerance)	A143
TPGX○○○○○○R/L	Insert (Class G tolerance)	A140	VBMT○○○○○○-MP	Insert (Class M tolerance)	A143
TPMH○○○○○○-FV	Insert (Class M tolerance)	A139	VBMT○○○○○○-MS	Insert (Class M tolerance)	A143
TPMH○○○○○○-MV	Insert (Class M tolerance)	A141	VBMT○○○○○○-MV	Insert (Class M tolerance)	A143
TPMH○○○○○○-SV	Insert (Class M tolerance)	A140	VBMT○○○○○○-SV	Insert (Class M tolerance)	A143
TPMN○○○○○○	Insert (Class M tolerance)	A157, L348	VBMW○○○○○○	Insert (Class M tolerance)	A144
TPMR○○○○○○	Insert (Class M tolerance)	A157	VC2C	MIRACLE end mill	J348
TPMX○○○○○○	Insert (Class M tolerance)	A141	VC4JRB	MIRACLE end mill	J308
TPMX○○○○○○L	Insert (Class M tolerance)	A140	VC4STB	MIRACLE end mill	J324
TPS○○	Clamp screw	P007	VCGT○○○○○○-AZ	Insert (Class G tolerance)	A145
TPS○○○	Clamp screw	P007	VCGT○○○○○○M-LS	Insert (Class G tolerance)	A146
TPS○○○○	Clamp screw	P007	VCGT○○○○○○M-LS-P	Insert (Class G tolerance)	A146
TRM2 type	Spare parts (For TRM2 type end mill)	P041	VCGT○○○○○○R/L-F	Insert (Class G tolerance)	A145
TRM4 type	Spare parts (For TRM4 type end mill)	P041	VCGW○○○○○○	Insert (Class G tolerance)	B064
TS○	Clamp screw	P008	VCLD	MIRACLE end mill	J168
TS○○	Clamp screw	P008	VCMDSC	MIRACLE end mill	J157
TS○○○	Clamp screw	P008	VCMT○○○○○○	Insert (Class M tolerance)	A147
TS○○○○	Clamp screw	P008	VCMT○○○○○○-FM	Insert (Class M tolerance)	A145
TSMPR○○○○S○○	TSMP type end mill	L320	VCMT○○○○○○-FP	Insert (Class M tolerance)	A145
TSS○○○○○	Radial screw	P008	VCMT○○○○○○-FV	Insert (Class M tolerance)	A145
TSS04505S	Clamp screw	P008	VCMT○○○○○○-LM	Insert (Class M tolerance)	A146
TTAHR/L○○○○○	Small tools holder (External threading)	D024	VCMT○○○○○○-LP	Insert (Class M tolerance)	A145
TTAT○○○○○○○R/L○-B	Insert for threading	D024	VCMT○○○○○○-LS	Insert (Class M tolerance)	A146
TTD	Taper shank drill, For steel frame	N242	VCMT○○○○○○-MK	Insert (Class M tolerance)	A147
U			VCMT○○○○○○-MM	Insert (Class M tolerance)	A147
UG type	Spare parts (For UG type holder)	P023	VCMT○○○○○○-MP	Insert (Class M tolerance)	A146
V			VCMT○○○○○○-MS	Insert (Class M tolerance)	A147
V10000 type	Spare parts (For V10000 type face mill)	P034	VCMT○○○○○○-MV	Insert (Class M tolerance)	A147
VA2MS	VIOLET end mill	J354	VCMT○○○○○○-SV	Insert (Class M tolerance)	A146
VA2SS	VIOLET end mill	J352	VCMW○○○○○○	Insert (Class M tolerance)	A147
VA4MC	VIOLET end mill	J364	VCPSRB	MIRACLE end mill	J302, J306
VAMFPR	VIOLET end mill	J372	VDGX○○○○○○R/L	Insert (Class G tolerance)	A148
VAMR	VIOLET end mill	J374	VDGX○○○○○○R/L-F	Insert (Class G tolerance)	B067
VAPDJ	VIOLET drill	N197	VF2MD	IMPACT MIRACLE end mill	J079
VAPDM	VIOLET drill	N193	VF2MV	IMPACT MIRACLE end mill	J081
VAPDMSUS	VIOLET drill	N202	VF2WB	IMPACT MIRACLE end mill	J199
VAPDS	VIOLET drill	N188	VF2XL	IMPACT MIRACLE end mill	J083
VAPDSCB	VIOLET drill	N206	VF2XLB	IMPACT MIRACLE end mill	J202
			VF2XLBS	IMPACT MIRACLE end mill	J200
			VF3XB	IMPACT MIRACLE end mill	J228

ORDER NUMBER	PRODUCT NAME	PAGE
VF4MB	IMPACT MIRACLE end mill	J243
VF4MD	IMPACT MIRACLE end mill	J153
VF4MV	IMPACT MIRACLE end mill	J155
VF6MHV	IMPACT MIRACLE end mill	J164
VF6MHVRB	IMPACT MIRACLE end mill	J316
VF6SVRCH	IMPACT MIRACLE end mill	J343
VF8MHVCH	IMPACT MIRACLE end mill	J169
VF8MHVRBCH	IMPACT MIRACLE end mill	J322
VFFDRB	IMPACT MIRACLE end mill	J300
VFHVRB	IMPACT MIRACLE end mill	J290, J296
VFMD	IMPACT MIRACLE end mill	J166
VFMDRB	IMPACT MIRACLE end mill	J320
VFMFPR	IMPACT MIRACLE end mill	J342
VFMHVCH	IMPACT MIRACLE end mill	J156
VFMHVRBCH	IMPACT MIRACLE end mill	J288
VFR2SB	IMPACT MIRACLE REVOLUTION end mill	J191
VFR2SBF	IMPACT MIRACLE REVOLUTION end mill	J193
VFR2SSB	IMPACT MIRACLE REVOLUTION end mill	J189
VFR2XLB	IMPACT MIRACLE REVOLUTION end mill	J195
VFRPSRB	IMPACT MIRACLE REVOLUTION end mill	J283
VFSD	IMPACT MIRACLE end mill	J165
VFSDRB	IMPACT MIRACLE end mill	J318
VFSFPR	IMPACT MIRACLE end mill	J339
VFSFPRCH	IMPACT MIRACLE end mill	J341
VFX5-AOR	VFX5 type end mill	L292
VFX6-AOR	VFX6 type end mill	L296
VIP400 type	Spare parts (VIP400 type face mill)	P034
VIP445 type	Spare parts (VIP445 type face mill)	P034
VIPER type	Spare parts (VIPER type end mill)	P039
VNGA	Insert (Class G tolerance)	A105, B036, B057
VNGG-FJ	Insert (Class G tolerance)	A102
VNGG-R/L	Insert (Class G tolerance)	A105
VNGG-R/L-F	Insert (Class G tolerance)	A102
VNGM-MJ	Insert (Class G tolerance)	A103
VNMA	Insert (Class M tolerance)	A105
VNMG	Insert (Class M tolerance)	A105
VNMG-FH	Insert (Class M tolerance)	A102
VNMG-FP	Insert (Class M tolerance)	A102
VNMG-FS	Insert (Class M tolerance)	A102
VNMG-GK	Insert (Class M tolerance)	A104
VNMG-GM	Insert (Class M tolerance)	A104
VNMG-LK	Insert (Class M tolerance)	A103
VNMG-LM	Insert (Class M tolerance)	A103
VNMG-LP	Insert (Class M tolerance)	A102
VNMG-LS	Insert (Class M tolerance)	A103
VNMG-MA	Insert (Class M tolerance)	A104
VNMG-MH	Insert (Class M tolerance)	A105
VNMG-MJ	Insert (Class M tolerance)	A103
VNMG-MK	Insert (Class M tolerance)	A104
VNMG-MM	Insert (Class M tolerance)	A103
VNMG-MP	Insert (Class M tolerance)	A103

ORDER NUMBER	PRODUCT NAME	PAGE
VNMG-MS	Insert (Class M tolerance)	A104
VNMG-SA	Insert (Class M tolerance)	A103
VNMG-SH	Insert (Class M tolerance)	A103
VOS400	VOS400 type side cutter	L134
VOX400R	VOX400 type face mill	L112
VOX400-R	VOX400 type face mill	L112, L113
VPET-R/L-SRF	Insert (Class E tolerance)	A149
VPGT-M-SMG	Insert (Class G tolerance)	A149
VPX200-AAR	VPX200 type face mill	L158
VPX200-AAROR	VPX200 type face mill	L160
VPX200R-AM	VPX200 type end mill	L157
VPX200R-SAS	VPX200 type end mill	L159
VPX200R-SAS/L	VPX200 type end mill	L156
VPX300-AAROR	VPX300 type face mill	L166
VPX300-AAR	VPX300 type face mill	L164
VPX300R08005CA	VPX300 type face mill	L166
VPX300R402SA32S	VPX300 type end mill	L165
VPX300R-AM	VPX300 type end mill	L163
VPX300R-CA	VPX300 type face mill	L164
VPX300R-SAS/L	VPX300 type end mill	L162
VQ2XLB	SMART MIRACLE end mill	J187
VQ4SVB	SMART MIRACLE end mill	J234
VQ4WB	SMART MIRACLE end mill	J236
VQ6MHVCH	SMART MIRACLE end mill	J163
VQ6MHVRBCH	SMART MIRACLE end mill	J314
VQFDRB	SMART MIRACLE end mill	J281
VQHVRB	SMART MIRACLE end mill	J279
VQJHV	SMART MIRACLE end mill	J147
VQMHV	SMART MIRACLE end mill	J143
VQMHVRB	SMART MIRACLE end mill	J270
VQMHVRBF	SMART MIRACLE end mill	J275
VQMHZV	SMART MIRACLE end mill	J103
VQMHZVOH	SMART MIRACLE end mill	J109
VQN2MB	SMART MIRACLE end mill	J185
VQN4MB	SMART MIRACLE end mill	J239
VQN4MBF	SMART MIRACLE end mill	J241
VQN4MVRB	SMART MIRACLE end mill	J277
VQN6MVRB	SMART MIRACLE end mill	J277
VQSVR	SMART MIRACLE end mill	J336
VQT5MVRB	SMART MIRACLE end mill	J312
VQT6UR	SMART MIRACLE barrel end mill	J333
VQXL	SMART MIRACLE end mill	J149
VSD	VIOLET drill	N208

W

WA-M10	Washer	F131
WBGTR/L-F	Insert (Class G tolerance)	A150
WBMTOR/L-MV	Insert (Class M tolerance)	A150
WCGTOR/L	Insert (Class G tolerance)	A151
WCMT	Insert (Class M tolerance)	A151
WCMT-MP	Insert (Class M tolerance)	A151
WCMW	Insert (Class M tolerance)	B065
WCSH	Shim screw	P008
WEC-AFR5C	Wiper insert (For SE445/545 type cutter)	L349
WEC-EFR5C	Wiper insert (For SE415/515 type cutter)	L349
WEEW13T3AGRC	Wiper insert (For ASX445 type cutter)	L058

INDEX FOR TOOL NUMBER

ORDER NUMBER	PRODUCT NAME	PAGE
WJX09-○○○○○○AR	WJX09 type face mill	L242
WJX09R○○○○○○A	WJX09 type face mill	L242, L243
WJX09R○○○○AM○○○	WJX09 type end mill	L244
WJX09R○○○○SA○○S/L/EL	WJX09 type end mill	L244
WJX14-○○○○○○AR	WJX14 type face mill	L250
WJX14R○○○○○○A	WJX14 type face mill	L250
WJX14R○○○○SA42S/L	WJX14 type end mill	L252
WNEU1305ZEN4C-M	Wiper insert (For AHX440S type cutter)	L064
WNEU2006ZEN7C-WK	Wiper insert (For AHX640S/640W type cutter)	L073, L081
WNEU2007ZEN7C-○○	Wiper insert (For AHX640S type cutter)	L073
WNGU1206ZNER5C-M	Wiper insert (For WSF406W type cutter)	L085
WNGU1406ANEN8C-M	Wiper insert (For WSX445 type cutter)	L045
WNMA○○○○○○○	Insert (Class M tolerance)	A110
WNMG○○○○○○○	Insert (Class M tolerance)	A109
WNMG○○○○○○-FH	Insert (Class M tolerance)	A106
WNMG○○○○○○-FP	Insert (Class M tolerance)	A106
WNMG○○○○○○-FS	Insert (Class M tolerance)	A106
WNMG○○○○○○-FY	Insert (Class M tolerance)	A106
WNMG○○○○○○-GH	Insert (Class M tolerance)	A110
WNMG○○○○○○-GJ	Insert (Class M tolerance)	A110
WNMG○○○○○○-GK	Insert (Class M tolerance)	A109
WNMG○○○○○○-GM	Insert (Class M tolerance)	A109
WNMG○○○○○○-LK	Insert (Class M tolerance)	A107
WNMG○○○○○○-LM	Insert (Class M tolerance)	A106
WNMG○○○○○○-LP	Insert (Class M tolerance)	A106
WNMG○○○○○○-LS	Insert (Class M tolerance)	A107
WNMG○○○○○○-MA	Insert (Class M tolerance)	A109
WNMG○○○○○○-MH	Insert (Class M tolerance)	A109
WNMG○○○○○○-MJ	Insert (Class M tolerance)	A107
WNMG○○○○○○-MK	Insert (Class M tolerance)	A108
WNMG○○○○○○-MM	Insert (Class M tolerance)	A108
WNMG○○○○○○-MP	Insert (Class M tolerance)	A108
WNMG○○○○○○-MS	Insert (Class M tolerance)	A108
WNMG○○○○○○-MW	Insert (Class M tolerance)	A109
WNMG○○○○○○-RK	Insert (Class M tolerance)	A110
WNMG○○○○○○-RM	Insert (Class M tolerance)	A110
WNMG○○○○○○-RP	Insert (Class M tolerance)	A109
WNMG○○○○○○-RS	Insert (Class M tolerance)	A110
WNMG○○○○○○-SA	Insert (Class M tolerance)	A107
WNMG○○○○○○-SH	Insert (Class M tolerance)	A107
WNMG○○○○○○-SW	Insert (Class M tolerance)	A107
WNMG○○○○○○-SY	Insert (Class M tolerance)	A107
WOEW12T308PE○R8C	Wiper insert (For ASX400 type cutter)	L120
WOEX1206PER5C	Wiper insert (For VOX400 type cutter)	L114
WPC42EEER/L10C	Wiper insert (For FBP415/QBP415 type cutter)	L349
WPGT○○○○○○○	Insert (Class G tolerance)	B065
WPGT○○○○○○R/L-FS	Insert (Class G tolerance)	A152
WPMT○○○○○○-MV	Insert (Class M tolerance)	A152
WPSTN○○	Shim	P014
WPT4405	Plate (For TAW type drill)	N151, N159
W○○-S1	Seal washer	L288, L293, L297
W○-S1	Seal washer	L293
WSF406WR○○○○○○N	WSF406W type face mill	L084
WS○○LH	Stopper	P017

ORDER NUMBER	PRODUCT NAME	PAGE
WS○○○○○○○T	Clamp screw	P009
WS○○○○○○○TPS	Clamp screw	P009
WS○○○○○○○TPS-○○LH	Spare parts set	N150
WSX445L○○○○○○○	WSX445 type face mill	L041
WSX445-○○○○○○○L	WSX445 type face mill	L043
WSX445R○○○○○○○	WSX445 type face mill	L040
WSX445-○○○○○○○R	WSX445 type face mill	L040, L042
WSX445R○○○○○SA32M	WSX445 type end mill	L044
WWX400R○○○○○○○	WWX400 type face mill	L100
WWX400-○○○○○○○R	WWX400 type face mill	L101
WWX400R○○○○○SA32M	WWX400 type end mill	L103

X

XCMT○○○○○○-SVX	Insert (Class M tolerance)	A153
XDGT1550PD○R-G○○	Insert (For BXD4000 type cutter)	L219
XDGX1750○○PD○R-G○	Insert (For AXD4000/AXD4000A type cutter)	L196, L204
XDGX2270○○PDER-GLA	Insert (For AXD7000 type cutter)	L210
XDGX2270○○PDFR-GL	Insert (For AXD7000 type cutter)	L210
XNMMU16○○○○○R-○S	Insert (For VFX5 type cutter)	L294
XNMMU19○○○○○R-○S	Insert (For VFX6 type cutter)	L298

Z

ZCMX○○○○○○ER-○	Insert (For DCCC type cutter)	L281
ZR type	Spare parts (For ZR type end mill)	P039

NUMBER / OTHERS

01-○	Insert (For brazed tools holder)	I002
02-○	Insert (For brazed tools holder)	I002
03-○	Insert (For brazed tools holder)	I002
04-○	Insert (For brazed tools holder)	I002
05-○	Insert (For brazed tools holder)	I002
06-○	Insert (For brazed tools holder)	I002
07-○	Insert (For brazed tools holder)	I003
08-○	Insert (For brazed tools holder)	I003
09E1	Insert (For brazed tools holder)	I003
31-○	31 type brazed tools holder	I005
32-○	32 type brazed tools holder	I005
33-○	33 type brazed tools holder	I005
34-○	34 type brazed tools holder	I005
35-○	35 type brazed tools holder	I005
36-○	36 type brazed tools holder	I005
37-○	37 type brazed tools holder	I006
38-○	38 type brazed tools holder	I006
39-○	39 type brazed tools holder	I006
40-○	40 type brazed tools holder	I006
41-○	41 type brazed tools holder	I006
42-○	42 type brazed tools holder	I006
43-○	43 type brazed tools holder	I006
47-○	47 type brazed tools holder	I007
49-○	49 type brazed tools holder	I007
51-○	51 type brazed tools holder	I007
95-○	95 type brazed tools holder	I007
1LA	HSS end mill	J351
1MA	HSS end mill	J350
2LS	HSS end mill	J360

ORDER NUMBER	PRODUCT NAME	PAGE	ORDER NUMBER	PRODUCT NAME	PAGE
2MK	HSS end mill	J362			
2MS	HSS end mill	J358			
2NGU1406ZNER6C-M	Wiper insert (For WWX400 type cutter).....	L105			
2SS	HSS end mill	J356			
3KD	Triangular shank drill, (Type 6.5)(Type 10)(Type 13) ...	N243			
4LC	HSS end mill	J368			
4MC	HSS end mill	J366			
6NGU PNOR	Insert (For WWX400 type cutter).....	L104			
6NMU PNER	Insert (For WWX400 type cutter).....	L104			
GUN REAMER		N180			
GUN REAMER with diamond compound		N181			

Memo

A series of horizontal dashed lines for writing a memo.

Memo

A series of horizontal dashed lines for writing, spanning the width of the page.